


 



 
 





 
 


 









 

 

 



 



 





 













	Original	Replacement		Original	Replacement
	Standby / On		Power		FM Mode
	Dimmer		Smart		<<
	Sleep		Sleep		>>
	Timer		AV		Repeat 1 / All
	Info / RDS		Info		Shuffle
	1		1		Stop
	2		2		Play / Pause
	3		3		Play / Pause
	4		4		Display
	5		5		Menu
	6		6		Time Mode
	7		7		Up
	8		8		Left / I<<
	9		9		Left / I<<
	0		0		Enter
	Clear		Exit		Right / >>I
	Program		Shift + Sleep		Right / >>I
					Media
					<<
					>>
					Text
					TV/R
					Stop
					Play
					Pause
					Shift + Info
					Menu
					3D
					Up
					Left
					I<<
					Ok
					Right
					>>I



