 

 

 



 

 

 

 

 

 

 

 

 

 



 
 






 

 









 



 








 

 

 

 

 

 

 

 

 
 


 











Original	Replacement	Original	Replacement
 PWR	 Power	 TV/Rad	 TV/Radio /
 TV/STB	 Display / Media	 1	 1
 2	 2	 3	 3
 4	 4	 5	 5
 6	 6	 7	 7
 8	 8	 9	 9
 Back	 Back / Return	 0	 0
 Mute	 Mute / Dimmer	 Red	 Red / Netflix / Search
 OPT	 Setup / OPT /		

Original	Replacement	Original	Replacement
 Green	 Green / APP / Repeat	 A/V+	 AV / Input / RDS
 Yellow / FAV	 Yellow / YouTube / Repeat	 FAV	 Fav / Marker / PC
 Blue / A-Z	 Blue / Prime Video / Random	 Blue / A-Z	 Shift + Blue / Prime
 Menu	 Menu / Home	 EPG	 Guide / EPG / -/-
 Info	 Info / Angle	 Up	 Up
 Left	 Left	 OK	 OK
 Right	 Right	 Down	 Down
 Vol+	 Vol+	 Exit	 Exit / Cancel / Clear
 PR/CH+	 CH+ / Page+		





Original		Replacement		Original		Replacement	
	Vol-		Vol-				
	PR/CH-		CH- / Page-				
	Pause		Pause / Step / Freeze				
	Play		Play / Slow				
	<<		<< / Tune-				
	Stop		Stop / Hold				
	>>		>> / Tune+				
	Rec		Rec / Rec Mode				
	I>/Slow		Shift + Play /				
	[:=]/List		Smart / List				
	A-B		Shift + YouTube /				
	Mark		Shift + Fav / Marker / PC				
	Jump		Text / Goto				
	PIP		Shift + OK				
	Swap		Shift + Left				
	Move		Shift + Right				
	Sleep		Sleep / Timer				

