

 
 






 
 
 

 

 




Original	Replacement	Original	Replacement
 Power	 Power	 Fav	 Shift + Pre Ch
 Mute	 Mute	 Size	 Eject
 1	 1	 Vol+	 Vol +
 2	 2	 Vol-	 Vol -
 3	 3	 CH+ / Page+	 Ch +
 4	 4	 CH- / Page-	 Ch -
 5	 5	 QV Top	 Smart
 6	 6	 Source	 AV
 7	 7	 Menu	 Menu
 8	 8	 Q.Menu	 D. Menu
 9	 9	 Display	 Info
 0	 0	 Up	 Up
 Audio Lang. I/II	 Dual	 Left	 Left
 Subtl	 Subt	 OK	 Ok
 EPG	 Guide	 Right	 Right
 → P ←	 Format	 Down	 Down
 → S ←	 Shift + Dual	 Exit	 Exit



