

 







 
 
 
 

 
 


 

 
 
 


 
 
 


 








Original	Replacement
 Power	 Power
 Theatre	 Smart
 One-Touch Play	 Shift + Play
 Eject	 Eject
 Sleep	 Sleep
 Display	 Shift + Info
 Function	 Options
 Tone	 3D
 Night	 Shift + Sleep
 Dimmer	 Shift + Mute
 Repeat	 Text
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6

Original	Replacement
 7	 7
 8	 8
 9	 9
 0	 0
 Clear	 Exit
 Enter	 Pre Ch
 Picture Navi	 List
 Audio	 Dual
 Subtitle	 Subt
 D.Tuning	 Media
 Angle	 Format
 DVD Top Menu	 Shift + Menu
 DVD Menu	 D. Menu
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right






 


 
 
 



 
 
 



 
 



 

 
 
 



 




 



 
 
 



 

 



Original	Replacement	Original	Replacement
Down	Down	Sound Mode+	Ch +
Return	Back	Sound Mode-	Ch -
System Menu	Menu		
[+] Display	Info		
I<< / Preset-	I<<		
Replay	Shift + Left		
Advance	Shift + Right		
>>I / Preset+	>>I		
<< / <I / Tuning-	<<		
Play	Play		
>> / I> / Tuning+	>>		
Pause	Pause		
Stop	Stop		
TV	TV/R		
Muting	Mute		
Volume+	Vol +		
Volume-	Vol -		





Original	Replacement
 Power	 Power
 [i+]	 Info
 Analog	 Media
 Digital	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Text	 Text
 -/--	 Shift + Guide
 Guide	 Guide

Original	Replacement
 Source	 AV
 Tools / Options	 Options
 Home / Menu	 Menu
 Muting	 Mute
 Volume+	 Vol +
 Volume-	 Vol -
 Prog+	 Ch +
 Prog-	 Ch -

