


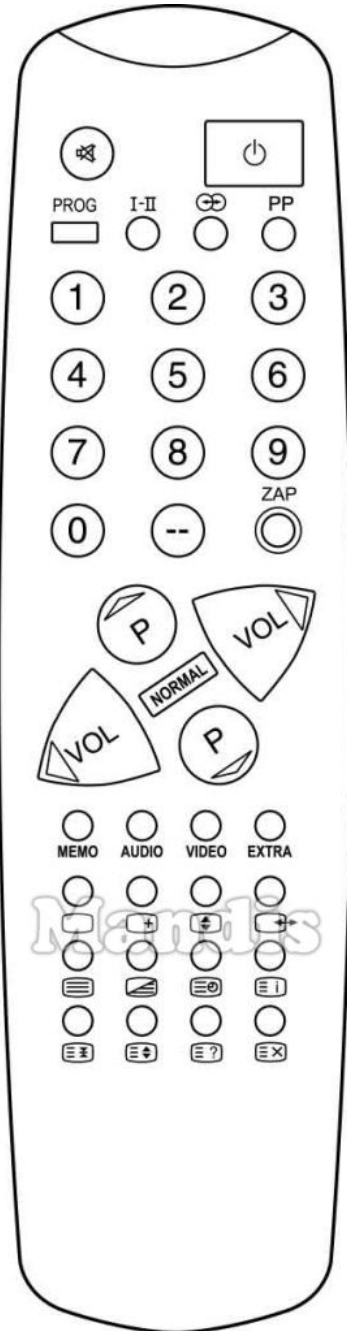

Original	Replacement	Original	Replacement
	Mute		Mute / Dimmer
	Power		Power
	Prog		TV/Radio /
	I-II		Audio / Lang I/II
	O to O		Sound / Title
	PP		Back / Return
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	--		Guide / EPG / --
	ZAP		Smart / List
	Up / P+		Up
	Up / P+		CH+ / Page+
	Right / Vol+		Right
	Right / Vol+		Vol+
	Left / Vol-		Left
	Left / Vol-		Vol-
	Normal		OK
	Down / P-		Down
	Down / P-		CH- / Page-
	Red / Memo		Red / Netflix / Search
	Green / Audio		Green / APP / Repeat
	Green / Audio		Shift + Audio / Lang I/II
	Yellow / Video		Yellow / YouTube / Repeat
	Blue / Extra		Blue / Prime Video / Random
	[ ]		Display / Media
	[ + ]		Stop / Hold





	Original	Replacement	
[ ⬥ ]	OPT-TOOLS SETUP	Setup / OPT /	
[ ]↔	TOP MENU D.MENU	D.Menu / Top	
[ ≡ ]	GOTO TEXT	Text / Goto	
[ /≡ ]	SHIFT + GOTO TEXT	Shift + Text /	
[ ≡ ⊕ ]	EQ SUBTITLE	Subtitle / EQ	
[ ≡ i ]	ANGLE INFO	Info / Angle	
[ ≡ □ ]	STEP-FREEZE 	Pause / Step / Freeze	
[ ≡ ⬥ ]	SIZE ZOOM	Zoom / Size	
[ ≡ ? ]	RDS AV INPUT	AV / Input / RDS	
[ ≡ X ]	CLEAR EXIT CANCEL	Exit / Cancel / Clear	

Original	Replacement

