


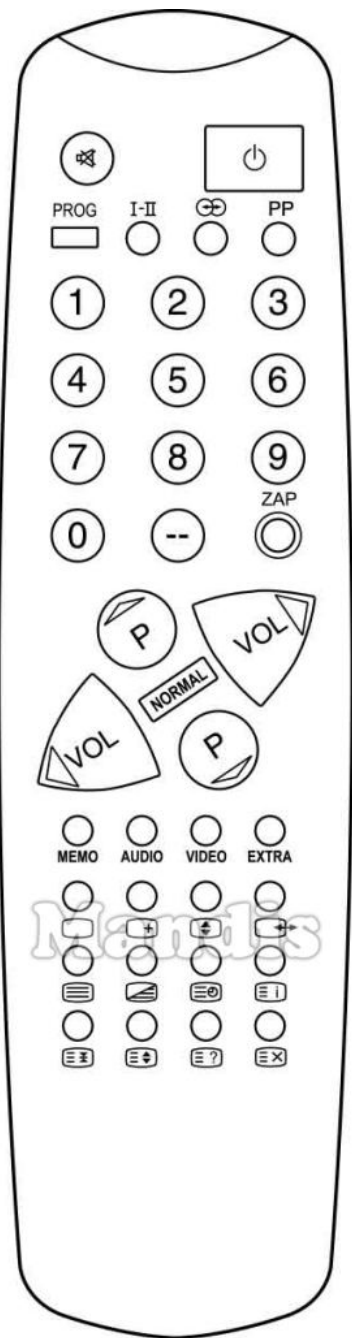

Original	Replacement	Original	Replacement
	Mute		Mute / Dimmer
	Power		Power
	Prog		TV/Radio /
	I-II		Audio / Lang I/II
	O to O		Sound / Title
	PP		Back / Return
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	--		Guide / EPG / --
	ZAP		Smart / List
	Up / P+		Up
	Up / P+		CH+ / Page+
	Right / Vol+		Right
	Right / Vol+		Vol+
	Left / Vol-		Left
	Left / Vol-		Vol-
	Normal		OK
	Down / P-		Down
	Down / P-		CH- / Page-
	Red / Memo		Red / Netflix / Search
	Green / Audio		Green / APP / Repeat
	Green / Audio		Shift + Audio / Lang I/II
	Yellow / Video		Yellow / YouTube / Repeat
	Blue / Extra		Blue / Prime Video / Random
	[ ]		Display / Media
	[ + ]		Stop / Hold





Original	Replacement
[ ⬠ ]	OPT-TOOLS <b>SETUP</b> Setup / OPT /
[ ]↔	TOP MENU <b>D.MENU</b> D.Menu / Top
[ ≡ ]	GOTO <b>TEXT</b> Text / Goto
[ / ≡ ]	SHIFT + GOTO Shift + Text /
[ ≡ ⊕ ]	EQ <b>SUBTITLE</b> Subtitle / EQ
[ ≡ i ]	ANGLE <b>INFO</b> Info / Angle
[ ≡ □ ]	STEP-FREEZE <b>  </b> Pause / Step / Freeze
[ ≡ ⬠ ]	SIZE <b>ZOOM</b> Zoom / Size
[ ≡ ? ]	RDS <b>AV INPUT</b> AV / Input / RDS
[ ≡ X ]	CLEAR <b>EXIT</b> Exit / Cancel / Clear

Original	Replacement

