




 
 
 

 



 

 





Original	Replacement
	Power
	Mute / Dimmer
	D.Menu / Top
	4
	Picture / Format
	Sound / Title
	AV / Input / RDS
	<< / Tune-
	Up
	>> / Tune+
	Left
	Play / Slow
	Shift + Play /
	Pause / Step / Freeze
	Right
	Back / Return
	Down

Original	Replacement
	Shift + Menu /
	Menu / Home
	Vol-
	Vol+
	I<< / Preset-
	Stop / Hold
	>>I / Preset+
	Subtitle / EQ
	Setup / OPT /
	Audio / Lang I/II
	Zoom / Size
	Shift + Zoom /
	Smart / List
	Green / APP / Repeat
	Display / Media
	Text / Goto
	Exit / Cancel / Clear

