


 






 

 

 












 









	Original	Replacement		Original	Replacement
	Power		Power		Exit
	Mute		Mute		Up
	1		1		Down
	2		2		Right
	3		3		Left
	4		4		Ok
	5		5		Vol +
	6		6		Vol -
	7		7		Shift + Dual
	8		8		Format
	9		9		Ch +
	0		0		Ch -
	Audio		Dual		Sleep
	Recall		Back		Aspect
	Tv Menu		Menu		Freeze
	Source		AV		USB
	CH List		List		Text





Original	Replacement	Original	Replacement
	EPG		Guide
	FAV		Pre Ch
	Info		Info
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	DTV		TV/R
	Hold		Eject
	List		Shift + List
	Subpage		Shift + Subt
	Index		Smart
	PVR List		D. Menu
	Mix		Shift + 3D
	Subtitle		Subt
	<<		<<
	>>		>>

