
 



 
 
 

 
 
 

 
 
 

 
 
 
 
 
 


 
 
 






Original	Replacement	Original	Replacement
 Power	 Power	 OK	 Ok
 Mute	 Mute	 Right	 Right
 1	 1	 Down	 Down
 2	 2	 Retour	 Back
 3	 3	 Quitter	 Exit
 4	 4	 Info	 Info
 5	 5	 Vol+	 Vol +
 6	 6	 Vol-	 Vol -
 7	 7	 ↑	 +  Shift + Ch +
 8	 8	 ↓	 +  Shift + Ch -
 9	 9	 Ch+	 Ch +
 0	 0	 Ch-	 Ch -
 HD	 Media	 Menu	 Menu
 VOD	 Smart	 Radio	 TV/R
 Guide	 Guide	 Red	 Red
 Up	 Up	 Green	 Green
 Left	 Left	 Yellow / Fav	 Yellow





Original		Replacement		Original		Replacement	
	Yellow / Fav		Pre Ch				
	Blue / Text		Blue				
	Blue / Text		Text				
	<<		<<				
	Stop		Stop				
	Pause / Play		Play				
	Pause / Play		Pause				
	>>		>>				
	Rec		Rec				
	Rec TV		List				

