



 









 

 

 

 



 









 





 



 

 

























Original	Replacement	Original	Replacement
	Mute		Mute / Dimmer
	Power		Power
	Input DVD CD		Shift + 2
	Input Radio /		Shift + 6
	Input VCR		Shift + 4
	Input SAT		Shift + 0
	Input AV AUX		Shift + 7
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	Listen Mode		TV/Radio /
	7		7
	8		8
	9		9
	Sound		Sound / Title
	10+		Guide / EPG / -/-
	Clear		Shift + Exit / Cancel / Clear
	0		0
	100+		Fav / Marker / PC
	Input Mode		AV / Input / RDS
	Front		Shift + Right
	Center		Shift + OK
	Rear		Shift + Left
	Sub-Woofer		Eject / Surround
	Repeat		Green / APP / Repeat
	Trim+		CH+ / Page+
	Volume+		Vol+
	Repeat A-B		Yellow / YouTube / Repeat
	Trim-		CH- / Page-
	Volume-		Vol-
	Top Menu		D.Menu / Top





Original	Replacement
	Up
	Menu / Home
	Text / Goto
	Left
	OK
	Right
	Exit / Cancel / Clear
	Down
	Display / Media
	Subtitle / EQ
	Audio / Lang I/II
	Stop / Hold
	Pause / Step / Freeze
	Play / Slow
	<< / Tune-
	Shift + << /
	>> / Tune+

Original	Replacement
	Shift + >> /
	I<< / Preset-
	Shift + I<< / Preset-
	>>I / Preset+
	Shift + >>I / Preset+
	Shift + Play /
	Shift + Pause / Step /
	Zoom / Size
	Picture / Format

