


 









 
 

 




 


 
 













 

 
 
 


 

 
 




 
 





 

 



 




Original	Replacement	Original	Replacement
 Power	 Power	 Up	 Up
 Mute	 Mute	 P+	 Ch +
 1	 1	 Down	 Down
 2	 2	 P-	 Ch -
 3	 3	 Right	 Right
 4	 4	 Left	 Left
 5	 5	 M	 Ok
 6	 6	 Vol+	 Vol +
 7	 7	 Vol-	 Vol -
 8	 8	 Red/Sound	 Red
 9	 9	 Green/Picture	 Green
 0	 0	 Yellow/Feature	 Yellow
 PP	 Back	 Blue/Install	 Blue
 P<P	 Pre Ch	 TV	 TV/R
 --	 Guide	 AV	 AV
 Info	 Info	 [≡]	 Text
 I-II	 Dual	 [/≡]	 3D



