



Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Net+	 Shift + Up
 DTV	 D.Menu / Top
 USB	 Shift + 8
 YouTube	 Shift + Yellow / YouTube / REPEAT A-B
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Tv Guide	 Guide / EPG / -/--
 0	 0

Original	Replacement
 Recall	 Shift + Back / Return
 Vol+	 Vol+
 Picture	 Picture / Format
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Sound	 Sound / Title
 CH-	 CH- / Page-
 Source	 AV / Input / RDS
 Menu	 Menu / Home
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 FAV	 Fav / Marker / PC





Original	Replacement
Info	Info / Angle
Sleep	Sleep / Timer
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Text	Text / Goto
Text/hold	Shift + Text /
Text/DVD Zoom	Zoom / Size
Power Display	Shift + Power
Rec	Rec / Rec Mode
I<<	I<< / Preset-
>>I	>>I / Preset+
Stop	Stop / Hold
Rec List	Shift + Rec / Rec Mode
<<	<< / Tune-
>>	>> / Tune+
Play	Play / Slow
Pause	Pause / Step / Freeze

Original	Replacement
Red/Goto	Red / Netflix / Search
Green/A-B	Green / APP / Repeat
Yellow/Angle/3D	Yellow / YouTube / Repeat
Blue/Repeat	Blue / Prime Video / Random

