


 
 


 
 


 





 

 








 






 





 

 

 











 



 










Original		Replacement		Original		Replacement	
	Standby		Power		TV/Radio		TV/R
	Source		AV		Display		Info
	1		1		Up		Up
	2		2		Left		Left
	3		3		OK		Ok
	4		4		Right		Right
	5		5		Down		Down
	6		6		Menu		Menu
	7		7		Exit		Exit
	8		8		Mute		Mute
	9		9		EPG		Guide
	0		0		Home		Smart
	Fav		Pre Ch		Vol+		Vol +
	Recall		Back		Vol-		Vol -
	P.Mode		Shift + Format		CH+		Ch +
	S.Mode		Shift + Dual		CH--		Ch -
	Sleep		Sleep		Rec		Rec





Original		Replacement		Original		Replacement	
	T.Shift		Media		Green		Green
	Audio		Dual		Yellow		Yellow
	Size / Aspect		Format		Blue		Blue
	Text		Text				
	Hold		Shift + Stop				
	Reveal		Shift + Pause				
	Mouse		Options				
	Play / Pause		Play				
	Play / Pause		Pause				
	Stop		Stop				
	Subtitle		Subt				
	Index / Reclist		List				
	<<		<<				
	>>		>>				
	I<< / Subpage		I<<				
	>>I / Mix		>>I				
	Red		Red				

