



Original		Replacement		Original		Replacement	
	Power		Power		Timer Rec		AV
	Eject		Shift + Eject		Rec OTR		Rec
	Open/Close		Eject		Marker/Tape		Options
	Display Call		Info		Jump/Zero Return		Pre Ch
	1		1		Clock/Counter		Yellow
	2		2		Counter Reset		Green
	3		3		Tv/VCR		TV/R
	4		4		VCR		Smart
	5		5		DVD		Media
	6		6		Setup Menu		Menu
	7		7		DVD Menu		D. Menu
	8		8		Up		Up
	9		9		Down		Down
	0/AV		0		Right/TRK+		Right
	Channel+		Ch +		Left/TRK-		Left
	Channel-		Ch -		Enter/Select		Ok
	Showview/Progra		Guide		Title		Red





Original	Replacement	Original	Replacement
RETURN	BACK		
STOP	STOP		
PLAY	PLAY		
PAUSE/STILL	PAUSE/STILL		
SKIP/INDEX -	SKIP/INDEX -		
SEARCH	SEARCH		
SKIP/INDEX +	SKIP/INDEX +		
SLOW	D		
CANCEL	EXIT		
REPEAT A-B	REPEAT TEXT		
ZOOM	3D		
ANGLE	LIST		
PLAY MODE	SHIFT + PLAY MODE		
SUB TITLE	SUBT		
AUDIO	DUAL		

