



| Original |                 | Replacement |               | Original |                  | Replacement |         |
|----------|-----------------|-------------|---------------|----------|------------------|-------------|---------|
|          | Power           |             | Power         |          | Timer Rec        |             | AV      |
|          | Eject           |             | Shift + Eject |          | Rec OTR          |             | Rec     |
|          | Open/Close      |             | Eject         |          | Marker/Tape      |             | Options |
|          | Display Call    |             | Info          |          | Jump/Zero Return |             | Pre Ch  |
|          | 1               |             | 1             |          | Clock/Counter    |             | Yellow  |
|          | 2               |             | 2             |          | Counter Reset    |             | Green   |
|          | 3               |             | 3             |          | Tv/VCR           |             | TV/R    |
|          | 4               |             | 4             |          | VCR              |             | Smart   |
|          | 5               |             | 5             |          | DVD              |             | Media   |
|          | 6               |             | 6             |          | Setup Menu       |             | Menu    |
|          | 7               |             | 7             |          | DVD Menu         |             | D. Menu |
|          | 8               |             | 8             |          | Up               |             | Up      |
|          | 9               |             | 9             |          | Down             |             | Down    |
|          | 0/AV            |             | 0             |          | Right/TRK+       |             | Right   |
|          | Channel+        |             | Ch +          |          | Left/TRK-        |             | Left    |
|          | Channel-        |             | Ch -          |          | Enter/Select     |             | Ok      |
|          | Showview/Progra |             | Guide         |          | Title            |             | Red     |





| Original |                  | Replacement |              | Original |  | Replacement |  |
|----------|------------------|-------------|--------------|----------|--|-------------|--|
|          | Return           |             | Back         |          |  |             |  |
|          | Stop             |             | Stop         |          |  |             |  |
|          | Play             |             | Play         |          |  |             |  |
|          | Pause            |             | Pause        |          |  |             |  |
|          | I<</- Index/Skip |             | I<<          |          |  |             |  |
|          | <<               |             | <<           |          |  |             |  |
|          | >>               |             | >>           |          |  |             |  |
|          | >>I/Skip/Index + |             | >>I          |          |  |             |  |
|          | I>/Slow          |             | Blue         |          |  |             |  |
|          | Cancel           |             | Exit         |          |  |             |  |
|          | Repeat A-B       |             | Text         |          |  |             |  |
|          | Zoom             |             | 3D           |          |  |             |  |
|          | Angle            |             | List         |          |  |             |  |
|          | Play Mode        |             | Shift + Play |          |  |             |  |
|          | Subtitle         |             | Subt         |          |  |             |  |
|          | Audio            |             | Dual         |          |  |             |  |

