




























Original	Replacement
 Power	 Power
 SD/USB- PVR	 Smart / List
 Time	 Sleep / Timer
 Mute	 Mute / Dimmer
 Vol+	 Vol+
 Source	 AV / Input / RDS
 Ch+	 CH+ / Page+
 Vol-	 Vol-
 Mode	 Picture / Format
 Ch-	 CH- / Page-
 Tv/Radio	 TV/Radio /
 Eject	 Eject / Surround
 Audio	 Audio / Lang I/II
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 L/R	 Display / Media
 Stop	 Stop / Hold

Original	Replacement
 Subtitle / PC Auto	 Subtitle / EQ
 Menu	 Menu / Home
 Up	 Up
 Exit	 Exit / Cancel / Clear
 <<	 << / Tune-
 Left	 Left
 Ok	 OK
 Right	 Right
 Fav	 Fav / Marker / PC
 >>	 >> / Preset+
 Down	 Down
 >>	 >> / Tune+
 Epg	 Guide / EPG / -/-
 I<<	 I<< / Preset-
 TTX/MIX	 Text / Goto
 Info/Display	 Info / Angle
 Red/Dvd Menu	 Red / Netflix / Search





Original	Replacement
Red/Dvd Menu	D.Menu / Top
Green/Lang	Green / APP / Repeat
Green/Lang	Shift + Audio / Lang I/II
Yellow/Repeat	Yellow / YouTube / Repeat
Yellow/Repeat	Shift + Green / APP /
Blue/Dvd Setup	Blue / Prime Video / Random
Blue/Dvd Setup	Setup / OPT /
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
RETURN	Return
Shift + Guide / EPG / -/--	Shift + Guide / EPG / -/--

Original	Replacement
0	0
RETURN	Back / Return

