



Original	Replacement
Power	Power
SD/USB- PVR	Smart / List
Time	Sleep / Timer
Mute	Mute / Dimmer
Vol+	Vol+
Source	AV / Input / RDS
Ch+	CH+ / Page+
Vol-	Vol-
Mode	Picture / Format
Ch-	CH- / Page-
Tv/Radio	TV/Radio /
Eject	Eject / Surround
Audio	Audio / Lang I/II
Play	Play / Slow
Pause	Pause / Step / Freeze
L/R	Display / Media
Stop	Stop / Hold

Original	Replacement
Subtitle / PC Auto	Subtitle / EQ
Menu	Menu / Home
Up	Up
Exit	Exit / Cancel / Clear
<<	<< / Tune-
Left	Left
Ok	OK
Right	Right
Fav	Fav / Marker / PC
>>I	>>I / Preset+
Down	Down
>>	>> / Tune+
Epg	Guide / EPG / -/-
I<<	I<< / Preset-
TTX/MIX	Text / Goto
Info/Display	Info / Angle
Red/Dvd Menu	Red / Netflix / Search





Original	Replacement
Red/Dvd Menu	D.Menu / Top
Green/Lang	Green / APP / Repeat
Green/Lang	+ Shift + Audio / Lang I/II
Yellow/Repeat	Yellow / YouTube / Repeat
Yellow/Repeat	+ Shift + Green / APP /
Blue/Dvd Setup	Blue / Prime Video / Random
Blue/Dvd Setup	Setup / OPT /
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
-/--	+ Shift + Guide / EPG / -/--

Original	Replacement
0	0
Return	Back / Return

