













 









 



 







 

 

 



 



 



 



 



 











| Original | | Replacement | | Original | | Replacement | |
|---|----------|---|--------------------------|---|---------------|---|-----------------------|
|  | Power |  | Power |  | 9 |  | 9 |
|  | Energy |  | Setup / OPT / |  | 0 |  | 0 |
|  | Picture |  | Picture / Format |  | TTX |  | Text / Goto |
|  | Sound |  | Sound / Title |  | Recall |  | Back / Return |
|  | Mute |  | Mute / Dimmer |  | Menu |  | Menu / Home |
|  | Audio |  | Audio / Lang I/II |  | Input |  | AV / Input / RDS |
|  | Subtitle |  | Subtitle / EQ |  | Exit |  | Exit / Cancel / Clear |
|  | 16:9/4:3 |  | Shift + Picture / Format |  | Info |  | Info / Angle |
|  | Sleep |  | Sleep / Timer |  | Up |  | Up |
|  | 1 |  | 1 |  | Down |  | Down |
|  | 2 |  | 2 |  | Right |  | Right |
|  | 3 |  | 3 |  | Left |  | Left |
|  | 4 |  | 4 |  | OK |  | OK |
|  | 5 |  | 5 |  | Vol+ |  | Vol+ |
|  | 6 |  | 6 |  | Vol- |  | Vol- |
|  | 7 |  | 7 |  | Index/CH List |  | Smart / List |
|  | 8 |  | 8 |  | Hold/EPG |  | Guide / EPG / -/- |





| Original | Replacement | Original | Replacement |
|---|---|----------|-------------|
|  Size/FAV List |  Fav / Marker / PC | | |
|  Subpage/Play List |  Display / Media | | |
|  CH+ |  CH+ / Page+ | | |
|  CH- |  CH- / Page- | | |
|  Play |  Play / Slow | | |
|  Stop |  Stop / Hold | | |
|  << |  << / Tune- | | |
|  >> |  >> / Tune+ | | |
|  Tv Pause |  Pause / Step / Freeze | | |
|  →/Goto |  TV/Radio / | | |
|  << |  << / Preset- | | |
|  >> |  >> / Preset+ | | |
|  Rec |  Rec / Rec Mode | | |
|  Red |  Red / Netflix / Search | | |
|  Green |  Green / APP / Repeat | | |
|  Yellow |  Yellow / YouTube / Repeat | | |
|  Blue |  Blue / Prime Video / Random | | |

| Original | Replacement |
|----------|-------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

