

 

 


 

 



 

 
 
 

 
 


 














Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide
	Back		Back
	P.Mode		Shift + Format
	S.Mode		Dual
	Sleep		Sleep

Original	Replacement	Original	Replacement
	Vol+		Vol +
	Vol-		Vol -
	Aspect		Format
	CH+		Ch +
	CH-		Ch -
	MTS		Media
	Set		Pre Ch
	Home		Smart
	Mouse		TV/R
	Menu		Menu
	Source		AV
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Exit		Exit





Original		Replacement		Original		Replacement	
	Display		Info		Hold		Shift + Stop
	Red		Red		Mix		Shift + Text
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	<< / Text		<<				
	<< / Text		Text				
	Play/Pause /		Play				
	Play/Pause /		Pause				
	>> / Reveal		>>				
	I<< / Cancel		I<<				
	>>I / Freeze		>>I				
	Stop / Index		Stop				
	EPG		Guide				
	Rec		Rec				
	Sub-T		Subt				
	Size		Eject				

