

 









 

 

 

 

 

 

 

 

 



Original	Replacement	Original	Replacement
Power	Power	Menu	Menu / Home
Tv	TV/Radio /	Return	Shift + Back / Return
1	1	Info	Info / Angle
2	2	Internet	Smart / List
3	3	Exit	Exit / Cancel / Clear
4	4	Up	Up
5	5	Down	Down
6	6	Right	Right
7	7	Left	Left
8	8	Red	Red / Netflix / Search
9	9	Enter	Shift + OK
0	0	Green	Green / APP / Repeat
Enter	OK	Yellow	Yellow / YouTube / Repeat
PRE-CH	Back / Return	Blue	Blue / Prime Video / Random
CH LIST	Shift + Smart / List	Vol+	Vol+
FAV CH	Fav / Marker / PC	Vol-	Vol-
Tools	Setup / OPT /	Mute	Mute / Dimmer

Tools





	Original	Replacement		Original	Replacement
	Source	 RDS AV INPUT			
	PR+	 CH+ / Page+			
	PR-	 CH- / Page-			
	TTX/MIX	 GOTO TEXT			
	Media.P	 MEDIA DISPLAY			
	Content	 FORMAT PICTURE			
	Guide	 GUIDE EPG			
	Subt	 EQ SUBTITLE			
	<<	 TUNE- << / Tune-			
	Pause	 STEP-FREEZE			
	>>	 TUNE+ >> / Tune+			
	Rec	 REC MODE			
	Play	 SLOW			
	Stop	 HOLD			

	Original	Replacement		Original	Replacement

