 



 

 





 





 















 





































Original		Replacement		Original		Replacement	
	Power Receiver		Power		DVR / BDR		Setup / OPT /
	Mute		Mute / Dimmer		MCACC		Text / Goto
	Play		Play / Slow		↻ Input Select		AV / Input / RDS
	Pause		Pause / Step / Freeze		Home Menu		Menu / Home
	Stop		Stop / Hold		Up		Up
	<<		<< / Tune-		D.Access		Info / Angle
	>>		>> / Tune+		Left		Left
	I<<		I<< / Preset-		Enter		OK
	>>I		>>I / Preset+		Right		Right
	Adv. Surr.		Sound / Title		T.Edit		Exit / Cancel / Clear
	Audio		Audio / Lang I/II		Down		Down
	iPod CTRL		Eject / Surround		Return		Back / Return
	A.ATT.		Picture / Format		Master Volume		Vol+
	HMG		Zoom / Size		Signal Sel		Smart / List
	Sleep		Sleep / Timer		CH Level		CH+ / Page+
	TV		TV/Radio /		Master Volume		Vol-
	Top Menu		D.Menu / Top		Disp		Display / Media





Original	Replacement	Original	Replacement
2nd Return	CH- / Page-	Dimmer	Shift + Mute / Dimmer
1	1	Tune-	Shift + << /
2	2	Tune+	Shift + >> /
3	3	Preset -	Shift + I<< / Preset-
4	4	Preset +	Shift + >>I / Preset+
5	5	Band	Shift + Sound / Title
6	6	Stereo	Shift + Audio / Lang I/II
7	7	Auto / Alc / Direct	Shift + Picture / Format
8	8	ADPT	Shift + TV/Radio / Program
9	9	MPX	Shift + D.Menu / Top Menu
Video	Guide / EPG / -/--	Status	Shift + Setup / OPT / Tools
0	0	Phase CTRL	Shift + Text /
BD	Fav / Marker / PC	Input Select ~	Shift + AV / Input / RDS
Class	Red / Netflix / Search	Standard	Shift + Menu /
Repeat	Green / APP / Repeat	2nd Up	Shift + Up
Enter (Class)	Yellow / YouTube / Repeat	2nd Left	Shift + Left
Random	Blue / Prime Video / Random	2nd Enter	Shift + OK

Original	Replacement	Original	Replacement
Dimmer	Shift + Mute / Dimmer	Tune-	Shift + << /
Tune+	Shift + >> /	Preset -	Shift + I<< / Preset-
Preset +	Shift + >>I / Preset+	Band	Shift + Sound / Title
Stereo	Shift + Audio / Lang I/II	Auto / Alc / Direct	Shift + Picture / Format
ADPT	Shift + TV/Radio / Program	MPX	Shift + D.Menu / Top Menu
Status	Shift + Setup / OPT / Tools	Phase CTRL	Shift + Text /
Input Select ~	Shift + AV / Input / RDS	Standard	Shift + Menu /
2nd Up	Shift + Up	2nd Left	Shift + Left
2nd Enter	Shift + OK		



