



| | Original | Replacement | | Original | Replacement |
|--|----------------|----------------|--|------------|-----------------------------|
| | Power Receiver | Power | | 3 Tuner | Shift + 3 |
| | DVD | 2 | | HDMI Out | AV / Input / RDS |
| | BD | 1 | | 4 Tuner | Shift + 4 |
| | DVR | 5 | | Signal Sel | Shift + Setup / OPT / Tools |
| | HDMI | 0 | | MCACC | Fav / Marker / PC |
| | TV | TV/Radio / | | 5 Tuner | Shift + 5 |
| | CD | 3 | | 6 Tuner | Shift + 6 |
| | CD-R | 9 | | Sleep | Sleep / Timer |
| | Home Media | Shift + Menu / | | 7 Tuner | Shift + 7 |
| | iPod / USB | 8 | | SBch | Eject / Surround |
| | Tuner | 6 | | 8 Tuner | Shift + 8 |
| | Video 1 | 4 | | A.ATT. | Yellow / YouTube / Repeat |
| | Video 2 | 7 | | 9 Tuner | Shift + 9 |
| | ↶ Input Select | Shift + Left | | Dimmer | Shift + Mute / Dimmer |
| | 1 Tuner | Shift + 1 | | D.Access | Shift + D.Menu / Top Menu |
| | Input Select ↷ | Shift + Right | | CH Level | Shift + CH+ / |
| | 2 Tuner | Shift + 2 | | 0 Tuner | Shift + 0 |





 

 


 













| Original | Replacement |
|---------------|-------------------------|
| Class | Shift + Display / Media |
| Enter (Class) | Shift + OK |
| Master Volume | Vol+ |
| Master Volume | Vol- |
| Mute | Mute / Dimmer |
| Top Menu | D.Menu / Top |
| Band | Subtitle / EQ |
| Audio | Audio / Lang I/II |
| Tune+ | Shift + >> / |
| Up | Up |
| Tools | Setup / OPT / |
| T.Edit | Text / Goto |
| Video | Picture / Format |
| Left | Left |
| Preset - | Shift + << / Preset- |
| Enter | OK |
| Preset + | Shift + >> / Preset+ |

| Original | Replacement |
|---------------------|-----------------------------|
| Right | Right |
| iPod CTRL | Smart / List |
| Home Menu | Menu / Home |
| Tune- | Shift + << / |
| Down | Down |
| Return | Back / Return |
| Auto / Alc / Direct | Info / Angle |
| Stereo | Sound / Title |
| Repeat | Green / APP / Repeat |
| Standard | Shift + Smart / List |
| Random | Blue / Prime Video / Random |
| Adv. Surr. | Guide / EPG / -/- |
| << | << / Tune- |
| Phase CTRL | Red / Netflix / Search |
| Play | Play / Slow |
| >> | >> / Tune+ |
| Status | Exit / Cancel / Clear |





| Original | Replacement | Original | Replacement |
|---|-------------|---|---------------------------|
|  | I<< |  | I<< / Preset- |
|  | Pause |  | Pause / Step / Freeze |
|  | MPX |  | Zoom / Size |
|  | PQLS |  | Shift + Info / Angle |
|  | Stop |  | Stop / Hold |
|  | >>I |  | >>I / Preset+ |
|  | Audio DVD |  | Shift + Audio / Lang I/II |
|  | Disp |  | Display / Media |
|  | CH - |  | CH- / Page- |
|  | CH + |  | CH+ / Page+ |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

| Original | Replacement | Original | Replacement |
|----------|-------------|----------|-------------|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |





 
 














 


 


 
 
 



 

 



 



 
 
| Original | Replacement |
|--------------|--------------|
| Power Source | Power |
| DVD | Shift + 2 |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| 0 | 0 |
| Top Menu | D.Menu / Top |
| Up | Up |
| Left | Left |
| Enter | Shift + OK |
| Enter | OK |

| Original | Replacement |
|----------|-----------------------|
| Right | Right |
| Down | Down |
| Return | Back / Return |
| Menu | Menu / Home |
| << | << / Tune- |
| Play | Play / Slow |
| >> | >> / Tune+ |
| I<< | I<< / Preset- |
| Pause | Pause / Step / Freeze |
| Stop | Stop / Hold |
| >>I | >>I / Preset+ |
| Audio | Audio / Lang I/II |





| Original | Replacement |
|---|---|
|  Power Source |  Power |
|  Tuner |  Shift + 6 |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  D.Access |  D.Menu / Top |
|  0 |  0 |
|  Class |  CH- / Page- |
|  Master Volume |  Vol+ |
|  Master Volume |  Vol- |
|  Mute |  Mute / Dimmer |

| Original | Replacement |
|---|--|
|  Band |  Smart / List |
|  Tune+ |  >> / Tune+ |
|  Tune+ |  Up |
|  T.Edit |  Text / Goto |
|  Preset- |  Left |
|  Preset- |  I<< / Preset- |
|  Enter |  OK |
|  Preset+ |  >>I / Preset+ |
|  Preset+ |  Right |
|  Search |  Red / Netflix / Search |
|  Tune- |  << / Tune- |
|  Tune- |  Down |
|  Menu |  Menu / Home |
|  MPX |  CH+ / Page+ |
|  Disp |  Display / Media |

