






 
 
 
 

 

 
 


 
 
 

 
 


 










 





 


 
 


 

 
 

 
 



 




















 

















	Original	Replacement		Original	Replacement
	Power		Power		0
	Open/Close		Eject		Return
	Band		Red		XTS Pro
	DVD		Green		Marker
	AUX		Yellow		Search
	USB		Blue		O)))/Audio
	Sleep		Sleep		Sound
	Dimmer		D. Menu		[...]/Subtitle
	1		1		VSM
	2		2		Setup
	3		3		Display
	4		4		Up
	5		5		Preset+
	6		6		Down
	7		7		Preset-
	8		8		Right/Tun.+
	9		9		Left/Tun-
					Shift + Dual
					Subt
					Smart
					Options
					Info
					Up
					Ch +
					Down
					Ch -
					Right
					Left





Original	Replacement
 Enter	 Ok
 Menu	 Menu
 Title	 List
 <</Scan-	 <<
 >>/Scan+	 >>
 Play	 Play
 I<</Skip-	 I<<
 >>I/Skip+	 >>I
 Pause/Step	 Pause
 Stop	 Stop
 Repeat	 Text
 Repeat A-B	 Shift + Text
 Vol+	 Vol +
 Vol-	 Vol -
 Prog/Memo	 Shift + Sleep
 Clear	 Exit
 Zoom	 Shift + Eject

Original	Replacement
 Mute	 Mute
 RDS	 AV

