


 






















 
 


 
 






Original	Replacement
	Mute / Dimmer
	Zoom / Size
	Power
	Info / Angle
	Picture / Format
	Sound / Title
	Pause / Step / Freeze
	Sleep / Timer
	Shift + D.Menu / Top Menu
	Shift + Info / Angle
	Shift + Yellow / YouTube / REPEAT A-B
	Vol-
	Vol+
	CH- / Page-
	CH+ / Page+
	Menu / Home
	Up

Original	Replacement
	AV / Input / RDS
	Left
	OK
	Right
	D.Menu / Top
	Down
	Exit / Cancel / Clear
	Guide / EPG / -/-
	<< / Tune-
	>> / Tune+
	Rec / Rec Mode
	Text / Goto
	Play / Slow
	Stop / Hold
	Shift + Down
	I<< / Preset-
	>>I / Preset+





Original	Replacement	Original	Replacement
 +/Goto	 Shift + Up		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 FAV FAV LIST	 PC FAV MARKER		Fav / Marker / PC
 0	 HDMI - BAT 0		
 RECALL	 RETURN BACK		Back / Return
	 NETFLIX SEARCH		Red / Netflix / Search
	 APP REPEAT		Green / APP / Repeat
	 YouTube REPEAT A-B		Yellow / YouTube / Repeat
	 Prime Video RANDOM		Blue / Prime Video / Random

Original	Replacement

