





















 
 




Original	Replacement
 Power	 Power
 Mute	 Mute
 Picture	 Shift + Format
 Aspect	 Format
 Sleep	 Sleep
 Sound	 Shift + Dual
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 FAV	 Shift + Pre Ch

Original	Replacement
 Recall	 Pre Ch
 Display	 Info
 Input	 AV
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Menu	 Menu
 Exit	 Exit
 Vol+	 Vol +
 Vol-	 Vol -
 EPG	 Guide
 Tv/Radio	 TV/R
 CH+	 Ch +
 CH-	 Ch -
 Subtitle	 Subt





Original		Replacement		Original		Replacement	
	CH List		List		Blue		Blue
	TV/TXT		Text				
	Cancel		Options				
	Reveal		Media				
	Nicam/A2		Dual				
	Index		I<<				
	Hold		>>I				
	Size		Eject				
	Subpage	 + 	Shift + Subt				
	<<		<<				
	>>		>>				
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	Red		Red				
	Green		Green				
	Yellow		Yellow				

