

 









 




 

 
 







 


 
 

 
 
 
 
 

 




 






| | Original | Replacement | | Original | Replacement |
|---|------------|---|-------|---|-----------------|
|  | Power |  | Power |  | Pause |
|  | Function |  | Smart |  | Stop |
|  | 1 |  | 1 |  | >> |
|  | 2 |  | 2 |  | << |
|  | 3 |  | 3 |  | Album Up |
|  | 4 |  | 4 |  | Album Down |
|  | 5 |  | 5 |  | Enter |
|  | 6 |  | 6 |  | Sleep |
|  | 7 |  | 7 |  | Repeat |
|  | 8 |  | 8 |  | Play Mode |
|  | 9 |  | 9 |  | Clock Timer Set |
|  | 0/10 |  | 0 |  | Clock Timer |
|  | +10 |  | Guide |  | Clear |
|  | Disc Skip |  | Blue |  | Vol+ |
|  | Preset >>1 |  | >>1 |  | Vol- |
|  | I<< Preset |  | I<< |  | Edit |
|  | Play/<> |  | Play |  | Band |





| | Original | Replacement | | Original | Replacement |
|--|------------|-------------|---------|----------|-------------|
| | Spectrum | | Options | | |
| | Tuner Mode | | TV/R | | |
| | Karaoke | | 3D | | |
| | Display | | Info | | |
| | Sound | | Dual | | |
| | GEQ | | Red | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |

