
 


 




 
 

 




 
 

 


 


 
 







 


 





 












 
 




 






Original	Replacement	Original	Replacement
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 Play	Menu Off	 Exit
Reveal	 Pause	Menu Down	 Down
Txt Stop	 Stop	Back	 Back
Info	 List	Volume+	 Vol +
Subt.List	 Subt	Chan.Up	 Ch +
Sleep Timer	 Sleep	Volume-	 Vol -
Return TV	 TV/R	Menu audio	 Dual
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7


 
 
 
 

 

 
 
 

 


Original	Replacement	Original	Replacement
8	 8	Tune+	 >>
9	 9	Aft/Caf	 +  Shift + Ok
Guide -/-- 1.	 GUIDE	Store	 Smart
0/10	 0	Bright- Sys	 +  Shift + Exit
2.Fav P/C 2.	 PRE-CH	Color- S.Std	 +  Shift + Dual
Red	 A	Surround	 +  Shift + Red
Green	 B	Nicam/Mono	 +  Shift + Green
Yellow	 C	Level L	 +  Shift + Yellow
Blue	 D		
Audio-	 <<		
Audio+	 >>		
Mix Scan	 MEDIA		
AV 2	 +  Shift + AV		
Tone+	 OPT		
Bright+ Mode	 +  Shift + Menu		
Search	 +  Shift + TV/R		
Tune-	 << <<		



Original	Replacement	Original	Replacement
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 Play	Menu Off	 Exit
Reveal	 Pause	Menu Down	 Down
Txt Stop	 Stop	Back	 Back
Info	 List	Volume+	 Vol +
Subt.List	 Subt	Chan.Up	 Ch +
Sleep Timer	 Sleep	Volume-	 Vol -
Return TV	 TV/R	Menu audio	 Dual
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7



Original	Replacement	Original	Replacement
8	 8		
9	 9		
Guide -/-- 1.	 GUIDE		
0/10	 0		
2.Fav P/C 2.	 PRE-CH		
Red	 A		
Green	 B		
Yellow	 C		
Blue	 D		
Mix Scan	 SHIFT +  TV/R		
Disp	 SHIFT +  INFO		

