



Original	Replacement
 Standby	 Shift + Power
 Power	 Power
 Multi	 Guide / EPG / -/--
 V-AUX	 7
 Phono	 Shift + Sound / Title
 Dock	 Zoom / Size
 BD/HD DVD	 Shift + 5
 DVD	 2
 CD	 3
 MD/CD-R	 Text / Goto
 CBL/SAT	 Shift + TV/Radio / Program
 TV	 TV/Radio /
 DVR	 D.Menu / Top
 VCR	 4
 Tuner	 6
 USB	 8
 System Memory	 Shift + 1

Original	Replacement
 System Memory	 Shift + 2
 System Memory	 Shift + 3
 System Memory	 Shift + 4
 Title	 Sound / Title
 Menu	 Menu / Home
 Vol+	 Vol+
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Vol-	 Vol-
 Return	 Back / Return
 Display	 Display / Media
 Mute	 Mute / Dimmer
 1/Classical	 1
 2/Live Club	 Shift + Display / Media





	Original	Replacement		Original	Replacement
	ENTERTAIN 3	3/Entertain			
	MOVIE 4	4/Movie			
	STEREO 5	5/Stereo			
	ENHANCER 6	6/Enhancer			
	SUR. DECODE 7	7/Sur. Decode			
	STRAIGHT 8	8/Straight			
	9	9			
	0	0			
	EXTD SUR. +10	+10/EXTD Sur.			
	PURE DIRECT ENT	ENT/Pure Direct			
	INFO +	Info			
	LEVEL +	Level			
	SLEEP MUTE	Sleep			
	AUDIO SEL AUDIO	Audio/Audio Sel			
	3D DSP	3D DSP			



 



 



 









 

 







 

 







 





 













 



 







Original	Replacement
	Power
	Sound / Title
	Menu / Home
	Vol+
	Up
	Left
	OK
	Right
	Down
	Vol-
	Back / Return
	Display / Media
	Mute / Dimmer
	Rec / Rec Mode
	Pause / Step / Freeze
	Play / Slow
	Stop / Hold

Original	Replacement
	<< / Tune-
	>> / Tune+
	I<< / Preset-
	>>I / Preset+
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Guide / EPG / -/-
	+  Shift + OK
	Audio / Lang I/II


 


 
 


 




 


Original	Replacement	Original	Replacement
 Power	 Power	 <<	 << / Tune-
 Band	 D.Menu / Top	 >>	 >> / Tune+
 SRCH Mode	 Setup / OPT /	 I<<	 I<< / Preset-
 Vol+	 Vol+	 >>I	 >>I / Preset+
 UP Preset/CH+	 Up	 1	 1
 Left	 Left	 2	 2
 Enter	 OK	 3	 3
 Right/A-E	 Right	 4	 4
 Down	 Down	 5	 5
 Vol-	 Vol-	 6	 6
 Memory	 Smart / List	 7	 7
 Parameter	 Menu / Home	 8	 8
 Mute	 Mute / Dimmer	 9	 9
 Rec	 Rec / Rec Mode	 0	 0
 Pause	 Pause / Step / Freeze	 +10	 Guide / EPG / -/-
 Play	 Play / Slow	 ENT	 Shift + OK
 Stop	 Stop / Hold	 Audio	 Audio / Lang I/II





Original	Replacement
 Power Multi	 Shift + Power
 Power	 Power
 Title	 Sound / Title
 Title Multi	 Shift + Sound / Title
 Menu	 Menu / Home
 Menu Multi	 Shift + Menu /
 Vol+	 Vol+
 Up	 Up
 Up Multi	 Shift + Up
 Left	 Left
 Left Multi	 Shift + Left
 Enter	 OK
 Enter Multi	 Shift + OK
 Right	 Right
 Right Multi	 Shift + Right
 Down	 Down
 Down Multi	 Shift + Down

Original	Replacement
 Vol-	 Vol-
 Return	 Back / Return
 Return Multi	 Shift + Back / Return
 Display	 Display / Media
 Display Multi	 Shift + Display / Media
 Mute	 Mute / Dimmer
 Rec	 Rec / Rec Mode
 Rec Multi	 Shift + Rec / Rec Mode
 Pause	 Pause / Step / Freeze
 Pause Multi	 Shift + Pause / Step /
 Play	 Play / Slow
 Play Multi	 Shift + Play /
 Stop	 Stop / Hold
 Stop Multi	 Shift + Stop /
 <<	 << / Tune-
 << Multi	 Shift + << /
 >>	 >> / Tune+





Original	Replacement
>> Multi	+  Shift + >> /
I<<	I<< / Preset-
I<< Multi	+  Shift + I<< / Preset-
>>I	>>I / Preset+
>>I Multi	+  Shift + >>I / Preset+
1	1
1 Multi	+  Shift + 1
2	2
2 Multi	+  Shift + 2
3	3
3 Multi	+  Shift + 3
4	4
4 Multi	+  Shift + 4
5	5
5 Multi	+  Shift + 5
6	6
6 Multi	+  Shift + 6

Original	Replacement
7	7
7 Multi	+  Shift + 7
8	8
8 Multi	+  Shift + 8
9	9
9 Multi	+  Shift + 9
+10	0
+10 Multi	+  Shift + 0
ENT	Guide / EPG / -/-
ENT Multi	Fav / Marker / PC
Audio	Smart / List
Audio Multi	+  Shift + Smart / List
	Audio / Lang I/II
	+  Shift + Audio / Lang I/II

