







 

 





 









 

 



 

 

 
 





 

 



 

 
 

 

 


 












 
Original	Replacement
 Power	 Power
 Standby	 Shift + Power
 Phono	 Shift + 1
 Multi CH In	 Shift + 2
 V-AUX/Dock	 Shift + 3
 Tuner	 Shift + 4
 MD/CD-R	 Shift + 5
 CD	 Shift + 6
 DTV/CBL	 Shift + 7
 DVR	 Shift + 8
 VCR	 Shift + 9
 DVD	 Shift + 0
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Level	 Smart
 Title	 Media

Original	Replacement
 Menu	 Menu
 Audio	 Dual
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Pure Direct	 Pre Ch
 Return	 Back
 Display	 Info
 Straight	 8
 Classical	 1
 Live Club	 2
 Entertain	 3
 Movie	 4
 Stereo	 5
 Enhancer	 6













 


 

 

 

 

 



 

 







 






 

 



 




 
 



 
 










Original	Replacement
 Power	 Power
 Standby	 +  Shift + Power
 Volume +	 Vol +
 Volume -	 Vol -
 Mute	 Mute
 Band	 Media
 Menu	 Menu
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right / A/B/C/D/E	 Right
 Down	 Down
 Return	 Back
 Display	 Info
 1	 1
 2	 2
 3	 3

Original	Replacement
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Sleep	 Sleep
 ENT	 Pre Ch
 Freq/Text	 I<<
 EON	 >>I
 PTY Seek Mode	 <<
 PTY Seek Start	 >>


 



 
 






Original		Replacement		Original		Replacement	
	Power		Power		4		4
	Vol+		Vol +		5		5
	Vol-		Vol -		6		6
	Mute		Mute		7		7
	Title		TV/R		8		8
	Menu		Menu		9		9
	Audio		Dual		0		0
	Up		Up		+10		Guide
	Left		Left		ENT		Pre Ch
	Enter		Ok		<<		<<
	Right		Right		>>		>>
	Down		Down		l<<		l<<
	Return		Back		>>l		>>l
	Display		Info		Rec		Rec
	1		1		Stop		Stop
	2		2		Pause		Pause
	3		3		Play		Play





Original	Replacement	Original	Replacement
 Power	 Power	 4	 4
 Volume+	 Vol +	 5	 5
 Volume-	 Vol -	 6	 6
 Mute	 Mute	 7	 7
 Title	 TV/R	 8	 8
 Menu	 Menu	 9	 9
 Audio	 Dual	 0	 0
 Up	 Up	 +10	 Guide
 Left	 Left	 ENT	 Pre Ch
 Enter	 Ok	 <<	 <<
 Right	 Right	 >>	 >>
 Down	 Down	 I<<	 I<<
 Return	 Back	 >>I	 >>I
 Display	 Info	 Rec	 Rec
 1	 1	 Stop	 Stop
 2	 2	 Pause	 Pause
 3	 3	 Play	 Play

