
 


 

 

 
 
 

 

 

 






 

 
 

 






Original		Replacement		Original		Replacement	
	Power Receiver		Power		Tuning -		Ch -
	Mute		Mute		Up		Up
	1		1		Left		Left
	2		2		Enter		Ok
	3		3		Right		Right
	4		4		Down		Down
	5		5		Return / Repeat		Back
	6		6		Info		Info
	7		7		Phono		Shift + 1
	8		8		Tape		Shift + 2
	9		9		CD		Shift + 3
	0		0		Line 1		Shift + 4
	+10		Guide		Line 2		Shift + 5
	Option		Options		Line 3		Shift + 6
	Volume +		Vol +		Dock		Shift + 7
	Volume -		Vol -		Tuner		Shift + 8
	Tuning +		Ch +		TP		Shift + 9





 








 
 

 






 

 





 






Original	Replacement
 Speakers A	 Red
 Speakers B	 Green
 Enter2	 Shift + Ok
 Menu/▲	 Menu
 Display/▼	 Shift + Info
 Top Menu/Shuffle	 Shift + Menu
 Sleep	 Sleep
 FM	 Smart
 AM	 Media
 Preset+	 Blue
 Preset-	 Yellow
 Power Source	 Text
 Power Source Line 2/Line 3	 AV
 Dimmer	 3D

Original	Replacement







Original	Replacement
 Power Source	 Power
 Display	 Info
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide
 Enter	 Ok
 Play	 Play
 Pause	 Pause
 Stop	 Stop

Original	Replacement
 Disc Skip	 Blue
 >>	 >>
 <<	 <<
 >>	 >>
  <<	  <<
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute

