


 

 

 



















 



 






 















 


 







 






Original	Replacement	Original	Replacement
 Standby / On	 Power	 i / Status	 Info
 Sleep	 Sleep	 Speakers	 List
 Dimmer	 Blue	 PHASE	 Shift + 3D
 ECO	 3D	 Signal Sel.	 AV
 BD	 1	 Auto / Direct	 TV/R
 GAME	 2	 Standard	 Format
 DVR / BDR	 3	 Adv. Surr.	 Subt
 DVD	 4	 Mute	 Mute
 SAT / CBL	 5	 Tools Menu	 Options
 HDMI	 6	 Up	 Up
 MHL	 Shift + 6	 Left	 Left
 iPod / USB	 7	 Enter	 Ok
 CD	 8	 Right	 Right
 ADPTER	 9	 Down	 Down
 TUNER	 Guide	 Home Menu	 Menu
 TV	 0	 iPod Ctrl.	 D. Menu
 NETWORK	 Pre Ch	 Return	 Back





Original	Replacement	Original	Replacement
 Volume+	 Vol +	 Random	 Text
 Volume-	 Vol -	 Disp	 Shift + Info
 Pause	 Pause	 Audio	 Dual
 BAND	 Shift + Play	 SB CH	 Media
 Play	 Play	 CH Level CH Sel	 Smart
 PTY	 Shift + Stop	 CH Level-	 Ch -
 Stop	 Stop	 CH Level+	 Ch +
 +Fav	 Shift + Pre Ch	 Bass-	 Shift + Down
 Preset -	 Shift + I<<	 Bass+	 Shift + Up
 I<<	 I<<	 Treble-	 Shift + Left
 Preset+	 Shift + >>I	 Treble+	 Shift + Right
 >>I	 >>I		
 Tune-	 Shift + <<<		
 <<<	 <<<		
 Tune+	 Shift + >>>		
 >>>	 >>>		
 Repeat	 Shift + Text		

