 
 












 









 













Original	Replacement
 On	 Power
 Off	 Shift + Power
 Mute	 Mute / Dimmer
 AVR	 Shift + AV / Input / RDS
 DVD	 Shift + 2
 VID1	 Shift + 4
 HDMI1	 Shift + 1
 AM/FM	 TV/Radio /
 CD	 Shift + 3
 VID2	 Shift + 8
 HDMI2	 Shift + 6
 AUX	 Shift + 7
 Tape	 Shift + 5
 VID3	 Shift + 0
 HDMI3	 Shift + 9
 Sleep	 Sleep / Timer
 Test	 Text / Goto

Original	Replacement
 6CH	 Sound / Title
 Vol+	 Vol+
 Surr.	 Eject / Surround
 OSD	 Display / Media
 Vol-	 Vol-
 CH./[≡?]	 Info / Angle
 SPKR/Menu	 Menu / Home
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Digital/[≡X]	 Setup / OPT /
 Down	 Down
 Delay/Prev. CH.	 Back / Return
 1	 1
 2	 2
 3	 3





Original		Replacement		Original		Replacement	
	4		4		Dolby Surr		Blue / Prime Video / Random
	5		5		DTS Surr.		Yellow / YouTube / Repeat
	6		6		DTS Neo 6		Green / APP / Repeat
	7		7		Night		Shift + Sleep / Timer
	8		8		Logic 7		Red / Netflix / Search
	Tun-M/[≡+]		CH+ / Page+		Stereo		Audio / Lang I/II
	9		9		I<</Skip Down		Shift + I<< / Preset-
	0		0		Skip Up/>>I		Shift + >>I / Preset+
	Mem/[≡◆]		CH- / Page-		DIM		Shift + Mute / Dimmer
	Tuning ▲		>> / Tune+		<< DVD		Shift + << /
	Direct		Smart / List		Play DVD		Play / Slow
	Clear		Exit / Cancel / Clear		>> DVD		Shift + >> /
	Preset ▲		>>I / Preset+		Stop DVD		Stop / Hold
	Tuning ▼		<< / Tune-		Pause DVD		Pause / Step / Freeze
	Tone		D.Menu / Top				
	RDS		AV / Input / RDS				
	Preset ▼		I<< / Preset-				

