

 




 



 
 
 


 
 





 
 

 





 



 

 


 
 



 

 
 
 

 

 

 
 
 





 

 





Original	Replacement	Original	Replacement
 Power	 Power	 Classical	 1
 Standby	 Shift + Power	 Live/Club	 2
 Volume+	 Vol +	 Entertain	 3
 Volume-	 Vol -	 Movie	 4
 Mute	 Mute	 Stereo	 5
 Up / Preset/CH+	 Up	 Enhancer	 6
 Down / Preset/CH-	 Down	 Sur.Decode	 7
 Right /	 Right	 Parameter	 8
 Left / A/B/C/D/E-	 Left	 Multi CH In	 9
 Menu/Set Menu/Srch Mode	 Menu	 0	 0
 Enter	 Ok	 Sleep	 Pre Ch
 Return/Memory	 Back	 <</Info	 <<
 Title/Level/Band	 TV/R	 >>/Eon	 >>
 Display	 Info	 I<</Mode PTY	 I<<
 Audio	 Dual	 >>I/PTY Seek	 >>I
 Pure Direct	 Smart	 Scene 1	 Red
 Straight	 Media	 Scene 2	 Green





 
 




 
 




 
 
 


 

 
 
 





 

 







Original	Replacement	Original	Replacement
 Scene 3	 Yellow		
 Scene 4	 Blue		
 Tuner	 Shift + 1		
 C	 Shift + Yellow		
 V-AUX/Dock	 Shift + 3		
 DTV/CBL	 Shift + 4		
 CD	 Shift + 5		
 MD/CD-R	 Shift + 6		
 DVD	 Shift + 7		
 DVR	 Shift + 8		
 VCR	 Shift + 9		
 Phono	 Shift + Pre Ch		

Original	Replacement	Original	Replacement





Original	Replacement
 Power	 Power
 Volume+	 Vol +
 Volume-	 Vol -
 Mute	 Mute
 Band	 TV/R
 Search Mode	 AV
 Memory	 Back
 Preset Up	 Up
 Preset Down	 Down
 Right A/B/C/D/E	 Right
 Left A/B/C/D/E	 Left
 Enter	 Ok
 Display	 Info
 1	 1
 2	 2
 3	 3
 4	 4

Original	Replacement
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 ENT	 Pre Ch
 Info	 Red
 PTY Seek Start	 Blue
 Eon	 Green
 Mode PTY Seek	 Yellow
 Power	 Shift + Power
 Up V-AUX/Dock	 Shift + Up
 Down	 Shift + Down
 Right V-AUX/Dock	 Shift + Right
 Left	 Shift + Left
 Enter V-AUX/Dock	 Shift + Ok





Original	Replacement
Audio V-AUX/Dock	Dual
Display	Shift + Info
Return	Shift + Back
Menu	Menu
Title V-AUX/Dock	Shift + TV/R
1 V-AUX/Dock	Shift + 1
2 V-AUX/Dock	Shift + 2
3 V-AUX/Dock	Shift + 3
4 V-AUX/Dock	Shift + 4
5 V-AUX/Dock	Shift + 5
6 V-AUX/Dock	Shift + 6
7 V-AUX/Dock	Shift + 7
8 V-AUX/Dock	Shift + 8
9 V-AUX/Dock	Shift + 9
0 V-AUX/Dock	Shift + 0
+10	Shift + Guide
ENT	Shift + Pre Ch





Original	Replacement
<< V-AUX/Dock	<<
<<	<<
>>	>>
>> V-AUX/Dock	>>
Rec V-AUX/Dock	Rec
Stop	Stop
Pause	Pause
Play	Play



V-AUX/Dock


 






Original	Replacement
 Power	 Power
 Standby	 Shift + Power
 Tuner	 1
 C	 Yellow
 V-AUX/Dock	 3
 DTV/CBL	 4
 CD	 5
 MD/CD-R	 6
 DVD	 7
 DVR	 8
 VCR	 9
 Phono	 Pre Ch
 Volume+	 Vol +
 Volume-	 Vol -
 Mute	 Mute
 <</Info	 <<
 >>/Eon	 >>

Original	Replacement
 I<</Mode PTY	 I<<
 >>/PTYSeek	 >>I





Original	Replacement
 Power	 Power
 Standby	 Shift + Power
 Tuner	 1
 C	 Yellow
 V-AUX/Dock	 3
 DTV/CBL	 4
 CD	 5
 DVD	 7
 DVR	 8
 VCR	 9
 Phono	 Pre Ch
 Volume+	 Vol +
 Volume-	 Vol -
 Mute	 Mute
 <</Info	 <<
 >>/Eon	 >>
 I<</Mode PTY	 I<<

Original	Replacement
 >>I/PTY Seek	 >>I



Seek