



	Original	Replacement		Original	Replacement
	ACOU	REPEAT TEXT	Text	3	3
	FM/AM	TIMER AV	AV	4	4
	CD	PICTURE FORMAT	Format	5	5
	TV	ECO 3D	3D	6	6
	CDV	A	Red	7	7
	PHONO	B	Green	8	8
	TAPE	C	Yellow	9	9
	VCR	D	Blue	10/0	0
	REAR	CLEAR EXIT	Exit	11/+	GUIDE
	FRONT	RETURN BACK	Back	12/-	PRE-CH
	UP	+ VOL	Vol +	MEMO CH/PGM	SETTINGS OPT
	DOWN	VOL -	Vol -	MODE	AD SUBT
	MUTE ACOU	MUTE	Mute	MODE	SHIFT + AD SUBT
	L	HOME SMART	Smart	UP	▶
	R	APP MEDIA	Media	DOWN	◀
	1	1	1	MUTE	SHIFT + MUTE
	2	2	2	L	SHIFT + HOME SMART





	Original	Replacement	
R	R TV	SHIFT + APP MEDIA	Shift + Media
MEMO CH/PGM	Memo/CH/PGM	SHIFT + SETTINGS OPT	Shift + Options
AMS /-/+	AMS/'" TV	SHIFT + SOUND DUAL	Shift + Dual
1	1 TV	SHIFT + 1	Shift + 1
2	2 TV	SHIFT + 2	Shift + 2
3	3 TV	SHIFT + 3	Shift + 3
4	4 TV	SHIFT + 4	Shift + 4
5	5 TV	SHIFT + 5	Shift + 5
6	6 TV	SHIFT + 6	Shift + 6
7	7 TV	SHIFT + 7	Shift + 7
8	8 TV	SHIFT + 8	Shift + 8
9	9 TV	SHIFT + 9	Shift + 9
10/0	10/0 TV	SHIFT + 0	Shift + 0
11/+	11/+ TV	SHIFT + -/+ GUIDE	Shift + Guide
12/-	12/- TV	SHIFT + FAV PRE-CH	Shift + Pre Ch

Original	Replacement





Original	Replacement	Original	Replacement
 Volume Up CD	 Vol +	 11/+ CD	 Guide
 Volume Down	 Vol -	 12/- CD	 Pre Ch
 Mute CD	 Mute	 Memo/CH/PGM	 Options
 L CD	 Smart	 AMS/" CD	 Dual
 R CD	 Media	 Play CD	 Play
 Front	 Back	 Pause CD	 Pause
 Rear	 Exit	 Stop CD	 Stop
 1 CD	 1	 << CD	 <<
 2 CD	 2	 >> CD	 >>
 3 CD	 3	 Volume Up	 Shift + Vol +
 4 CD	 4	 Volume Down	 Shift + Vol -
 5 CD	 5	 Mute Phono	 Shift + Mute
 6 CD	 6	 L Phono	 Shift + Smart
 7 CD	 7	 R Phono	 Shift + Media
 8 CD	 8	 1 Phono	 Shift + 1
 9 CD	 9	 2 Phono	 Shift + 2
 0/10 CD	 0	 3 Phono	 Shift + 3



 

 



 
 




 
 
 

 
 


 
 

 


 
 


 
 


 
 
























 







	Original	Replacement	
	4 Phono	SHIFT + 4	Shift + 4
	5 Phono	SHIFT + 5	Shift + 5
	6 Phono	SHIFT + 6	Shift + 6
	7 Phono	SHIFT + 7	Shift + 7
	8 Phono	SHIFT + 8	Shift + 8
	9 Phono	SHIFT + 9	Shift + 9
	0/10 Phono	SHIFT + 0	Shift + 0
	Memo/CH/PGM	SHIFT + SETTINGS OPT	Shift + Options
	Play Phono	SHIFT + PLAY MODE	Shift + Play
	Pause Phono	SHIFT + II	Shift + Pause
	Stop Phono	SHIFT + ■	Shift + Stop
	>> Phono	SHIFT + >>	Shift + >>
	<< Phono	SHIFT + <<	Shift + <<

Original	Replacement





Original		Replacement		Original		Replacement	
	Volume Up		Vol +		11/+ FM/AM		Guide
	Volume Down		Vol -		12/- FM/AM		Pre Ch
	Mute FM/AM		Mute		Memo/CH/PGM		Options
	Front		Back		AMS/'/' FM/AM		Dual
	Rear		Exit		Mode FM/AM		Subt
	L FM/AM		Smart		Volume Up VCR		Shift + Vol +
	R FM/AM		Media		Volume Down		Shift + Vol -
	1 FM/AM		1		Mute VCR		Shift + Mute
	2 FM/AM		2		L VCR		Shift + Smart
	3 FM/AM		3		R VCR		Shift + Media
	4 FM/AM		4		1 VCR		Shift + 1
	5 FM/AM		5		2 VCR		Shift + 2
	6 FM/AM		6		3 VCR		Shift + 3
	7 FM/AM		7		4 VCR		Shift + 4
	8 FM/AM		8		5 VCR		Shift + 5
	9 FM/AM		9		6 VCR		Shift + 6
	10/0 FM/AM		0		7 VCR		Shift + 7





	Original	Replacement		Original	Replacement
	8 VCR	Shift + 8			
	9 VCR	Shift + 9			
	10/0 VCR	Shift + 0			
	11/+ VCR	Shift + Guide			
	12/- VCR	Shift + Pre Ch			
	Memo/CH/PGM	Shift + Options			
	AMS/'" VCR	Shift + Dual			
	Mode VCR	Shift + Subt			
	>> VCR	Shift + >>			
	<< VCR	Shift + <<			
	Pause VCR	Shift + Pause			
	Stop VCR	Shift + Stop			
	Rec VCR	Shift + Rec			
	Play VCR	Shift + Play			
	<> VCR	Shift + >>I			











	Original	Replacement		Original	Replacement
	Volume UP CDV	 Vol +		11/+ CDV	 Guide
	Volume Down	 Vol -		12/- CDV	 Pre Ch
	Mute CDV	 Mute		Memo/CH/PGM	 Options
	Rear	 Exit		Mode CDV	 Subt
	Front	 Back		Play CDV	 Play
	L CDV	 Smart		Pause CDV	 Pause
	R CDV	 Media		Stop CDV	 Stop
	1 CDV	 1		>> CDV	 >>
	2 CDV	 2		<< CDV	 <<
	3 CDV	 3		Volume Up	 Shift + Vol +
	4 CDV	 4		Volume Down	 Shift + Vol -
	5 CDV	 5		Mute Tape	 Shift + Mute
	6 CDV	 6		L Tape	 Shift + Smart
	7 CDV	 7		R Tape	 Shift + Media
	8 CDV	 8		1 Tape	 Shift + 1
	9 CDV	 9		2 Tape	 Shift + 2
	10/O CDV	 0		3 Tape	 Shift + 3





Original	Replacement
 4 Tape	 Shift + 4
 5 Tape	 Shift + 5
 6 Tape	 Shift + 6
 7 Tape	 Shift + 7
 8 Tape	 Shift + 8
 9 Tape	 Shift + 9
 10/0 Tape	 Shift + 0
 12/- Tape	 Shift + Pre Ch
 11/+ Tape	 Shift + Guide
 Memo/CH/PGM	 Shift + Options
 AMS/'" Tape	 Dual
 Play Tape	 Shift + Play
 Pause Tape	 Shift + Pause
 <> Tape	 Shift + >>I
 Stop Tape	 Shift + Stop
 >> Tape	 Shift + >>
Rec Tape	Shift + Rec

Original	Replacement
 << Tape	 I<<
 Deck B Tape	 Shift + Green
 Deck A Tape	 Shift + Red

