 

 










 

 



 






 



















 

 





 






 




 




 



 














 
 


Original	Replacement
 Source	 AV / Input / RDS
 Power	 Power
 Mute	 Mute / Dimmer
 TXT	 Text / Goto
 )) [ ]	 Audio / Lang I/II
 Rec	 Rec / Rec Mode
 [ > ]	 Eject / Surround
 Stop	 Stop / Hold
 Play/Pause	 Play / Slow
 Play/Pause	 Pause / Step / Freeze
 <<<	 <<< / Tune-
 <<<	 I<<< / Preset-
 >>>	 >>> / Tune+
 >>>	 >>>I / Preset+
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat

Original	Replacement
 Blue	 Blue / Prime Video / Random
	 Sound / Title
 Del	 Exit / Cancel / Clear
 Vol+	 Vol+
 Home	 Menu / Home
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Mouse	 Smart / List
 CH-	 CH- / Page-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Settings	 Setup / OPT /
 Back	 Back / Return
 EPG	 Guide / EPG / -/-





Original	Replacement	Original	Replacement
 Recall	 Fav / Marker / PC		
 FAV	 +  Shift + Fav / Marker / PC		
 Info	 Info / Angle		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 Subtitle	 Subtitle / EQ		
 0	 0		
 Format	 Picture / Format		

