



Original	Replacement	Original	Replacement
 Power	 Power	 <<	 <<
 Open/Close	 Eject	 Play	 Play
 Tv/VCR	 TV/R	 >>	 >>
 AV	 AV	 Pause	 Pause
 30 Sec >>	 >>I	 Stop	 Stop
 <</Open/Close/P	 I<<	 'I'	 Blue
 Back	 Back	 Menu	 Menu
 1	 1	 OK	 Ok
 2	 2	 0000	 Smart
 3	 3	 Rec/ITR	 Rec
 4	 4	 Up/PR+	 Up
 5	 5	 Down/PR-	 Down
 6	 6	 Right	 Right
 7	 7	 Left	 Left
 8	 8	 Showview	 Media
 9	 9	 Video/Plus*/Tv/AV	 Format
 0	 0	 Tv PR+	 Ch +

Original	Replacement	Original	Replacement
 <<	 <<	 Play	 Play
 >>	 >>	 Pause	 Pause
 Stop	 Stop	 'I'	 Blue
 Menu	 Menu	 OK	 Ok
 0000	 Smart	 Rec/ITR	 Rec
 Up/PR+	 Up	 Down/PR-	 Down
 Right	 Right	 Left	 Left
 Showview	 Media	 Video/Plus*/Tv/AV	 Format
 Tv PR+	 Ch +		





Original	Replacement	Original	Replacement
Tv PR-	Ch -		
Tv Vol+	Vol +		
Tv Vol-	Vol -		
Lock	Options		
Power Tv	Shift + Power		

