

 



 

 
 




Original	Replacement
	Power
	Mute / Dimmer
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	<< / Tune-
	>> / Tune+
	I<< / Preset-
	>>I / Preset+
	Play / Slow
	Pause / Step / Freeze
	Stop / Hold
	[≡i] Display / Media
	Text / Goto
	Subtitle / EQ
	Shift + Pause / Step / Freeze

Original	Replacement
	Info / Angle
	Menu / Home
	AV / Input / RDS
	Guide / EPG / -/--
	Exit / Cancel / Clear
	Up
	Down
	Right
	Left
	OK
	Vol+
	Vol-
	Fav / Marker / PC
	Rec / Rec Mode
	CH+ / Page+
	CH- / Page-
	1





Original	Replacement	Original	Replacement
2	2	DVD 2	2
3	3	CD - STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
0	0	HDMI - BAT 0	0
AUDIO	Audio	LANG I/II AUDIO	Audio / Lang I/II
RECALL	Recall	RETURN BACK	Back / Return

