









 
 



 







 







 



 


 




 


 






 

 

 

 

 

 
 







Original	Replacement	Original	Replacement
 Power	 Power	 1	 1
 Open/Close	 Eject	 2	 2
 FM Mode	 TV/R	 3	 3
 Tuner Memory	 Format	 4	 4
 Repeat	 Text	 5	 5
 Theatre Sync	 Shift + Power	 6	 6
 Timer Menu	 Smart	 7	 7
 Sleep	 Sleep	 8	 8
 Display	 Info	 9	 9
 Time/Text	 AV	 0	 0
 Dimmer	 Media	 Clear	 Exit
 Function+	 Ch +	 Folder+	 Shift + Ch +
 Function-	 Ch -	 Folder-	 Shift + Ch -
 Picture Navi	 List	 DVD Top Menu	 Menu
 Audio	 Dual	 DVD/USB Menu	 D. Menu
 Subtitle	 Subt	 EQ	 3D
 Angle	 Options	 Return	 Back



 


 


 








 
 


 
 


 
 

 

 
 





Original	Replacement	Original	Replacement
 Display/[ *]	 Shift + Info		
 Up	 Up		
 Down	 Down		
 Right	 Right		
 Left	 Left		
 Enter	 Ok		
 Volume+	 Vol +		
 Volume-	 Vol -		
 I<</Preset-	 I<<		
 <-/Replay/<II Step	 Guide		
 ->/Advance/Step II>	 Pre Ch		
 >>I/Preset+	 >>I		
 <</Tuning -/<I	 <<		
 Play	 Play		
 >>/Tuning	 >>		
 Pause	 Pause		
 Stop	 Stop		

 
 




Original Replacement

	Power		Power
	Tv/Video		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	10/0		0
	-/--		Guide
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -

Original Replacement

	Enter		Ok

