



| Original | Replacement |
|--|---|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  Red / Find |  Red / Netflix / Search |
|  Green / V-Format |  Picture / Format |
|  Green / V-Format |  Green / APP / Repeat |
|  Yellow / TXT |  Text / Goto |
|  Yellow / TXT |  Yellow / YouTube / Repeat |
|  Blue / Audio |  Audio / Lang I/II |
|  Blue / Audio |  Blue / Prime Video / Random |
|  Record |  Rec / Rec Mode |
|  Play |  Play / Slow |
|  Stop |  Stop / Hold |
|  Shift |  Setup / OPT / |
|  << Fast |  << / Tune- |
|  Fast >> |  >> / Tune+ |
|  < Slow |  I<< / Preset- |
|  Slow > |  >>I / Preset+ |

| Original | Replacement |
|--|---|
|  Sleep |  Sleep / Timer |
|  Zoom |  Zoom / Size |
|  F1 |  Shift + 1 |
|  F2 |  Shift + 2 |
|  Menu |  Menu / Home |
|  Up / PR+ |  Up |
|  Up / PR+ |  CH+ / Page+ |
|  Exit |  Exit / Cancel / Clear |
|  Left / Vol- |  Left |
|  Left / Vol- |  Vol- |
|  OK / List |  OK |
|  OK / List |  Smart / List |
|  Right / Vol+ |  Vol+ |
|  Right / Vol+ |  Right |
|  EPG |  Guide / EPG / -/-- |
|  Down / PR- |  Down |
|  Down / PR- |  CH- / Page- |



