





 













 











 














 


 

 







Original	Replacement
 Power	 Power
 Input	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Disp	 Display / Media
 0	 0
 Recall	 Back / Return
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+

Original	Replacement
 Vol-	 Vol-
 Mouse	 Smart / List
 CH-	 CH- / Page-
 P.Mode	 Picture / Format
 Home	 Shift + Menu /
 S.Mode	 Sound / Title
 Menu	 Menu / Home
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 Enter	 OK
 Right	 Right
 Netflix	 Shift + Red / Netflix /
 Down	 Down
 YouTube	 Shift + Yellow / YouTube /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat





Original		Replacement		Original		Replacement	
	Yellow	REPEAT A-B	Yellow / YouTube / Repeat				
NICAM	Blue	RANDOM	Blue / Prime Video / Random				
	Play/Pause	SLOW	Play / Slow				
	Play/Pause	STEP - FREEZE	Pause / Step / Freeze				
	Stop	HOLD	Stop / Hold				
	<<	TUNE-	<< / Tune-				
	>>	TUNE+	>> / Tune+				
	<<	PRESET-	<< / Preset-				
	>>	PRESET+	>> / Preset+				
	USB	+	Shift + 8				
	Sleep	TIMER	Sleep / Timer				

