
















 





 








 






 

 










 
 

 

 

 

 

 








Original	Replacement	Original	Replacement
	Power		Power
	FL Display		Smart
	TUNER BAND		Green
	AUX		Red
	Top Menu		D. Menu
	Menu		Menu
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Display		Info
	Return		Back
	I<<		I<<
	>>I		>>I
	<<		<<
	>>		>>
	Stop		Stop
	Pause		Pause
	Play		Play
	Disc Skip		Sleep
	SFC		Eject
	CH-		Ch -
	CH+		Ch +
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute
	Subwoofer		Shift + 4
	Action		Options
	Subtitle		Subt
	Audio		Dual
	Angle		Format
	Marker		3D
	CH Select		Shift + Media
















 



 









 




 



Original	Replacement
TEST	SHIFT + 6 Shift + 6
MIX 2ch	SHIFT + 2 Shift + 2
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
>10 / Enter	GUIDE Guide
Disc	FAV PRE-CH Pre Ch
Seat Position	SHIFT + 1 Shift + 1
Center Focus	SEARCH TV/R TV/R
Super Surround	SHIFT + 3 Shift + 3

Original	Replacement
PRO LOGIC	SHIFT + 5 Shift + 5
Disc Manager	DISC NAV LIST List
Play Mode	SHIFT + PLAY MODE Shift + Play
Cancel	CLEAR EXIT Exit
Repeat	REPEAT TEXT Text
A-B Repeat	SHIFT + REPEAT TEXT Shift + Text
Cinema	APP MEDIA Media
Timer	TIMER AV AV




 





 











 


















Original	Replacement	Original	Replacement
 Power	 Power		
 TV Vol-	 Vol -		
 TV Vol+	 Vol +		
 TV / Video	 AV		
 CH+	 Ch +		
 CH-	 Ch -		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 ≥10	 Guide		





Original		Replacement		Original		Replacement	
	Power		Power		Play		Play
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	≥10		Guide				
	CH+		Ch +				
	CH-		Ch -				
	Stop		Stop				
	<<		<<				
	>>		>>				

