






 
 


 

 


 
 
 
 









Original	Replacement	Original	Replacement
PWR On/Off	 Power	Back	 Back
Mute	 Mute	Volume+	 Vol +
Opt?	 Options	CH/Page+	 Ch +
Epg	 Shift + Guide	Volume-	 Vol -
Info	 Shift + Info	CH/Page-	 Ch -
TV	 TV/R	Audio	 Dual
Text	 Text	1. ?	 1
Zoom	 Eject	2abc	 2
TV/SAT	 AV	3def	 3
Menu	 Menu	4ghi	 4
Menu Up	 Up	5jkl	 5
Display	 Info	6mno	 6
Menu Left	 Left	7pqrm	 7
OK Enter	 Ok	8tuv	 8
Menu Right	 Right	9wxyz	 9
Exit	 Exit	Guide Pilote	 Guide
Menu Down	 Down	0/10	 0



Original	Replacement	Original	Replacement
FAV Pref.	 Pre Ch		
Red	 Red		
Green	 Green		
Yellow	 Yellow		
Blue	 Blue		
	 Shift + Ch +		
	 Shift + Ch -		

