

 
 
 
 
 

 
 
 

 

 

 

 



 

 

 

 

 

 





Original	Replacement
 Power	 Power
 Source Search	 Source
 Computer	 Comp / Video
 Video	 Shift + Comp / Video
 USB	 Mode
 LAN	 Shift + Menu
 Screen Fit 1	 Shift + Freeze / Timer
 1	 Shift + Vol + / Page +
 2	 Shift + + / Play
 3	 Shift + Volt / Focus
 4	 Shift + Vol - / Page -
 5	 Shift + - / Stop
 6	 Shift + Help /
 7	 Shift + Eco / Aspect
 8	 Shift + 3D /
 9	 Shift + Blank / Mute
 0	 Shift + Mode

Original	Replacement
 Auto 7	 Auto
 Menu	 Menu
 ID	 3D / Invert
 Aspect 8	 Eco / Aspect
 Color Mode 9	 Shift + Source
 Esc	 Shift + Power
 Up	 Up
 Pointer	 Shift + Enter
 Down	 Down
 User	 Volt / Focus
 Right	 Right
 Left	 Left
 Enter	 Enter
 E-Zoom+	 + / Play
 E-Zoom-	 - / Stop
 Vol+	 Vol + / Page +
 Vol-	 Vol - / Page -





Original	Replacement	Original	Replacement
Freeze	Freeze / Timer		
?/Help	Help / Info		
Page+	Shift + Up		
Page-	Shift + Down		
A/V Mute	Blank / Mute		
Split	Shift + Auto		

Original	Replacement

