







 

 





Original	Replacement
Power	Power
Power Tv	Shift + Power
Vol+ Tv	Vol+
CH+ TV	Shift + CH+ /
AV Input Tv	AV / Input / RDS
Vol- Tv	Vol-
CH- Tv	Shift + CH- /
1	1
2	2
3	3
Rec	Rec / Rec Mode
4	4
5	5
6	6
CH+	CH+ / Page+
7	7
8	8

Original	Replacement
9	9
CH-	CH- / Page-
Last View	Shift + Back / Return
0	0
Drive Select	Display / Media
Prog/Check	Menu / Home
-10s	Fav / Marker / PC
+60s	Shift + Guide / EPG / -/-
Internet	Smart / List
Netflix	Shift + Red / Netflix /
<<	<< / Tune-
Play	Play / Slow
>>	>> / Tune+
I<<	I<< / Preset-
Pause	Pause / Step / Freeze
>>I	>>I / Preset+
Stop	Stop / Hold





Original	Replacement	Original	Replacement
 i/Status	 Info / Angle	 Delete	 Shift + Exit / Cancel / Clear
 Guide	 Guide / EPG / -/--	 Text	 Text / Goto
 Exit	 Exit / Cancel / Clear	 STTL	 Subtitle / EQ
 Video Menu	 Shift + 4		
 Up	 Up		
 Function Menu	 D.Menu / Top		
 Left	 Left		
 OK	 OK		
 Right	 Right		
 Option	 Setup / OPT /		
 Down	 Down		
 Return	 Back / Return		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 Audio	 Audio / Lang I/II		

Original	Replacement	Original	Replacement
 Delete	 Shift + Exit / Cancel / Clear	 Delete	 Shift + Exit / Cancel / Clear
 Text	 Text / Goto	 Text	 Text / Goto
 STTL	 Subtitle / EQ	 STTL	 Subtitle / EQ

