

 

 








 
 


 



 

 

 

 

 
 















 



Original	Replacement
 Power	 Power
 Power Tv	 Shift + Power
 Vol+ Tv	 Vol+
 CH+ Tv	 Shift + CH+ /
 AV Input Tv	 Shift + AV / Input / RDS
 Vol- Tv	 Vol-
 CH- Tv	 Shift + CH- /
 1	 1
 2	 2
 3	 3
 Rec	 Rec / Rec Mode
 4	 4
 5	 5
 6	 6
 Page/CH+	 CH+ / Page+
 7	 7
 8	 8

Original	Replacement
 9	 9
 Page/CH-	 CH- / Page-
 Last View	 Shift + Back / Return
 0	 0
 Radio/Tv	 TV/Radio /
 Input Select	 AV / Input / RDS
 -10s	 Fav / Marker / PC
 +60s	 Shift + Guide / EPG / -/-
 Internet	 Smart / List
 Netflix	 Shift + Red / Netflix /
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 Pause	 Pause / Step / Freeze
 >>I	 >>I / Preset+
 Stop	 Stop / Hold





Original	Replacement
 i/Status	 Info / Angle
 X/Exit	 Exit / Cancel / Clear
 Guide	 Guide / EPG / -/--
 Video Menu	 D.Menu / Top
 Up	 Up
 Function Menu	 Menu / Home
 Left	 Left
 OK	 OK
 Right	 Right
 Option	 Setup / OPT /
 Down	 Down
 Return	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Audio	 Audio / Lang I/II

Original	Replacement
 Drive Select	 Display / Media
 Text	 Text / Goto
 STTL	 Subtitle / EQ

