



Original	Replacement	Original	Replacement
Power	Power	Eco	3D
Sleep	Sleep	Volume Up	Vol +
CBL/SAT	1	Volume Down	Vol -
Media Player	2	Mute	Mute
Blu-ray	3	Info	Info
Game	4	Option	Options
AUX1	5	Back	Back
AUX2	6	Setup	Menu
Phono	7	Play	Play
TV Audio	8	Up	Up
Tuner	9	Down	Down
USB	Guide	Right	Right
Bluetooth	0	Left	Left
Internet Radio	Pre Ch	Enter	Ok
Micro	Smart	I<</Tune-	I<<
CH/Page Up	Ch +	Pause	Pause
CH/Page Down	Ch -	>>I/Tune+	>>I



 
 
 


 








 

 





Original		Replacement		Original		Replacement	
	Quick Select 1		D. Menu				
	Quick Select 2		Text				
	Quick Select 4		AV				
	Quick Select 3		Eject				
	Green/Movie		Red				
	Red/Music		Green				
	Blue/Game		Blue				
	Yellow/Pure		Yellow				





Original		Replacement		Original		Replacement	
	Power		Power		Volume Up		Vol +
	Sleep		Sleep		Volume Down		Vol -
	CBL/SAT		1		Mute		Mute
	Media Player		2		Up		Up
	Blu-ray		3		Down		Down
	Game		4		Right		Right
	AUX1		5		Left		Left
	AUX2		6		Enter		Ok
	Phono		7		Back		Back
	TV Audio		8		I<</Tune-		I<<
	Tuner		9		Play		Play
	USB		Guide		Pause		Pause
	Bluetooth		0		>>I/Tune+		>>I
	Internet Radio		Pre Ch		Quick Select 1		D. Menu
	Micro		Smart		Quick Select 2		Text
	CH/Page Up		Ch +		Quick Select 3		Eject
	CH/Page Down		Ch -		Quick Select 4		AV

