 













 

 



 

 





 









Original	Replacement
 Power Receiver	 Power
 DVD	 2
 TV	 1
 VCR	 4
 CD-R	 3
 TUN	 6
 Test Tone	 Display / Media
 Input ATT	 TV/Radio /
 FL Dimmer	 Shift + Mute / Dimmer
 CH Select	 Smart / List
 CH Level-	 CH- / Page-
 CH Level+	 CH+ / Page+
 Effect-	 << / Tune-
 Effect+	 >> / Tune+
 Remote Setup	 Setup / OPT /
 Standard	 Subtitle / EQ
 Adv.Surr.	 Eject / Surround

Original	Replacement
 Stereo	 Audio / Lang I/II
 Input Sel	 AV / Input / RDS
 Signal Select	 Sound / Title
 Midnight / Loudness	 Sleep / Timer
 Mute	 Mute / Dimmer
 Up/Tune+	 Up
 Up/Tune+	 Shift + >> /
 Left/ST-	 Left
 Left/ST-	 Shift + I<< / Preset-
 Enter	 OK
 Right/ST+	 Right
 Right/ST+	 Shift + >>I / Preset+
 Down/Tune-	 Down
 Down/Tune-	 Shift + << /
 Master	 Vol+
 Master Volume-	 Vol-
 TV Vol+	 Shift + Vol+


















 




 



 













































Original		Replacement	
	Tv Vol-	+	Shift + Vol-
	TV Input	+	Shift + AV / Input / RDS
	TV Power	+	Shift + Power

Original		Replacement	





Original	Replacement	Original	Replacement
 Power DVD	 Power	 Channel+ DVD	 CH+ / Page+
 1 DVD	 1	 Channel- DVD	 CH- / Page-
 2 DVD	 2	 Up DVD	 Up
 3 DVD	 3	 Down DVD	 Down
 4 DVD	 4	 Right DVD	 Right
 5 DVD	 5	 Left DVD	 Left
 6 DVD	 6	 Enter DVD	 OK
 7 DVD	 7	 Pause DVD	 Pause / Step / Freeze
 8 DVD	 8	 Rec DVD	 Rec / Rec Mode
 9 DVD	 9	 Play DVD	 Play / Slow
 0 DVD	 0	 << DVD	 << / Tune-
 +10 DVD	 Guide / EPG / -/-	 >> DVD	 >> / Tune+
 Menu DVD	 Menu / Home	 >>I DVD	 >>I / Preset+
 Top Menu DVD	 D.Menu / Top	 Stop DVD	 Stop / Hold
 Master	 Vol+	 I<< DVD	 I<< / Preset-
 Master volume-	 Vol-	 Audio DVD	 Audio / Lang I/II
 Mute	 Mute / Dimmer	 Sub Title DVD	 Subtitle / EQ








Original	Replacement
Angle DVD	Info / Angle
Power VCR	Shift + Power
1 VCR	Shift + 1
2 VCR	Shift + 2
3 VCR	Shift + 3
4 VCR	Shift + 4
5 VCR	Shift + 5
6 VCR	Shift + 6
7 VCR	Shift + 7
8 VCR	Shift + 8
9 VCR	Shift + 9
0 VCR	Shift + 0
Disc VCR	Shift + Back / Return
Channel+ VCR	Shift + CH+ /
Channel- VCR	Shift + CH- /
Up VCR	Shift + Up
Down VCR	Shift + Down

Original	Replacement
Right VCR	Shift + Right
Left VCR	Shift + Left
Enter VCR	Shift + OK
Pause VCR	Shift + Pause / Step /
Play VCR	Shift + Play /
Stop VCR	Shift + Stop /
<< VCR	Shift + << /
>>I VCR	Shift + >>I / Preset+
>> VCR	Shift + >> /
I<< VCR	Shift + I<< / Preset-
Rec VCR	Shift + Rec / Rec Mode









 

 
 










 















 

Original	Replacement
 Power CD	 Power
 1 CD	 1
 2 CD	 2
 3 CD	 3
 4 CD	 4
 5 CD	 5
 6 CD	 6
 7 CD	 7
 8 CD	 8
 9 CD	 9
 0 CD	 0
 +10 CD	 Guide / EPG / -/--
 Disc CD	 Back / Return
 Master	 Vol+
 Master Volume-	 Vol-
 Mute	 Mute / Dimmer
 Channel+ CD	 CH+ / Page+

Original	Replacement
 Channel- CD	 CH- / Page-
 Up CD	 Up
 Down CD	 Down
 Right CD	 Right
 Left CD	 Left
 Enter CD	 OK
 Pause CD	 Pause / Step / Freeze
 Play CD	 Play / Slow
 << CD	 << / Tune-
 >> CD	 >> / Tune+
 >> CD	 >> / Preset+
 I<< CD	 I<< / Preset-
 Stop CD	 Stop / Hold
 Power TVC	 Shift + Power
 1 TVC	 Shift + 1
 2 TVC	 Shift + 2
 3 TVC	 Shift + 3




 




 














 

 



 


 

 











Original	Replacement
 4 TVC	 Shift + 4
 5 TVC	 Shift + 5
 6 TVC	 Shift + 6
 7 TVC	 Shift + 7
 8 TVC	 Shift + 8
 9 TVC	 Shift + 9
 0 TVC	 Shift + 0
 +10 TVC	 Shift + Guide / EPG / -/-
 Disc TVC	 Shift + Back / Return
 Menu TVC	 Shift + Menu /
 Up TVC	 Shift + Up
 Down TVC	 Shift + Down
 Right TVC	 Shift + Right
 Left TVC	 Shift + Left
 Enter TVC	 Shift + OK
 Pause TVC	 Shift + Pause / Step /
 Rec TVC	 Shift + Rec / Rec Mode

Original	Replacement
 Play TVC	 Shift + Play /
 Stop TVC	 Shift + Stop /
 << TVC	 Shift + << /
 >>I TVC	 Shift + >>I / Preset+
 >> TVC	 Shift + >> /
 I<< TVC	 Shift + I<< / Preset-





Original	Replacement	Original	Replacement
 Power TUN	 Power	 Left TUN	 Left
 1 TUN	 1	 D.Access TUN	 Play / Slow
 2 TUN	 2	 Band TUN	 Smart / List
 3 TUN	 3	 T.Edit	 Pause / Step / Freeze
 4 TUN	 4	 Class TUN	 << / Tune-
 5 TUN	 5	 RF ATT TUN	 >> / Tune+
 6 TUN	 6	 MPX TUN	 Stop / Hold
 7 TUN	 7	 Display TUN	 Display / Media
 8 TUN	 8	 Power CDR	 Shift + Power
 9 TUN	 9	 1 CDR	 Shift + 1
 0 TUN	 0	 2 CDR	 Shift + 2
 Master	 Vol+	 3 CDR	 Shift + 3
 Master volume-	 Vol-	 4 CDR	 Shift + 4
 Mute	 Mute / Dimmer	 5 CDR	 Shift + 5
 Up TUN	 Up	 6 CDR	 Shift + 6
 Down TUN	 Down	 7 CDR	 Shift + 7
 Right TUN	 Right	 8 CDR	 Shift + 8





Original	Replacement
9 CDR	Shift + 9
0 CDR	Shift + 0
+10 CDR	Shift + Guide / EPG / -/-
Channel+ CDR	Shift + CH+ /
Channel- CDR	Shift + CH- /
Up CDR	Shift + Up
Down CDR	Shift + Down
Right CDR	Shift + Right
Left CDR	Shift + Left
Enter CDR	Shift + OK
Pause CDR	Shift + Pause / Step /
Play CDR	Shift + Play /
Stop CDR	Shift + Stop /
<< CDR	Shift + << /
Rec CDR	Shift + Rec / Rec Mode
I<< CDR	Shift + I<< / Preset-
>> CDR	Shift + >> /

Tune+

Original	Replacement
>>I CDR	Shift + >>I / Preset+

