 

 



 



 

 

 
 








 









 

 



 

 









 



 

 


 
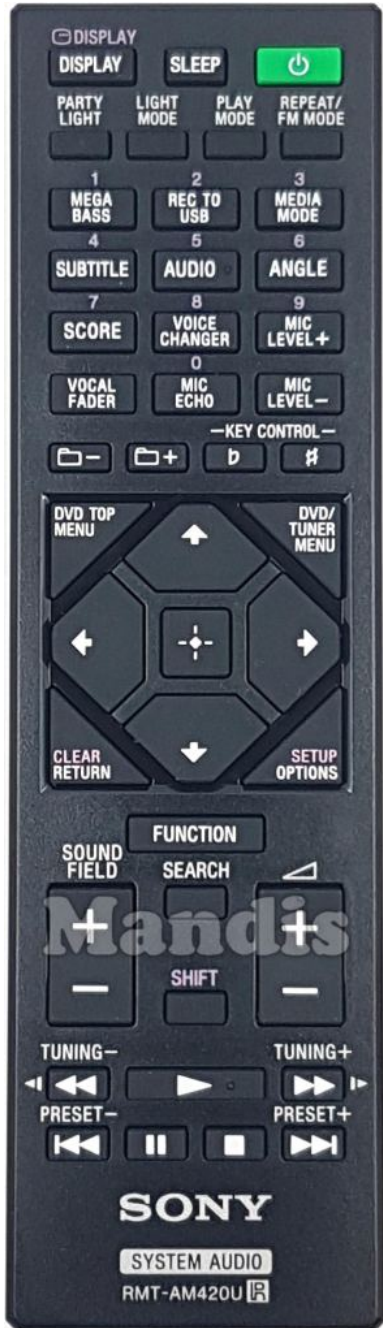 




 

 







Original	Replacement
 Power	 Power
 Sleep	 Sleep / Timer
 Display	 Display / Media
 [*]/Display	 Smart / List
 Party Light	 Sound / Title
 Light Mode	 Picture / Format
 Play Mode	 Shift + Play /
 Repeat/FM	 Green / APP / Repeat
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Original	Replacement
 0	 0
 Mega Bass	 Text / Goto
 Rec to USB	 Rec / Rec Mode
 Media Mode	 Shift + Display / Media
 Subtitle	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 Angle	 Eject / Surround
 Score	 TV/Radio /
 Voice Changer	 AV / Input / RDS
 Mic Level+	 Shift + CH+ /
 Vocal Fader	 Fav / Marker / PC
 Mic Echo	 Zoom / Size
 Mic Level-	 Shift + CH- /
 Folder+	 Shift + Up
 Folder-	 Shift + Down
 Key Control b	 Yellow / YouTube / Repeat
 Key Control #	 Blue / Prime Video / Random





Original	Replacement
 DVD Top Menu	 D.Menu / Top
 DVD Tuner	 Menu / Home
 Return	 Back / Return
 Clear	 Exit / Cancel / Clear
 Options	 Shift + Setup / OPT / Tools
 Setup	 Setup / OPT /
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 Function	 Guide / EPG / -/--
 Sound Field+	 CH+ / Page+
 Sound Field-	 CH- / Page-
 Search	 Red / Netflix / Search
 Vol+	 Vol+
 Vol-	 Vol-

Original	Replacement
 <</Tuning-	 << / Tune-
 Play	 Play / Slow
 >>/Tuning+	 >> / Tune+
 I<</Preset-	 I<< / Preset-
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 >>I/Preset+	 >>I / Preset+

