 







 

 

 

 

 

 

 

 






























 




 







| Original   | Replacement  |
|--|--|
|  Power      |  Power                        |
|  Tuner      |  Shift + 6                    |
|  Source     |  AV / Input / RDS             |
|  1          |  1                            |
|  2          |  2                            |
|  3          |  3                            |
|  4          |  4                            |
|  5          |  5                            |
|  6          |  6                            |
|  7         |  7                           |
|  8        |  8                          |
|  9        |  9                          |
|  0        |  0                          |
|  .        |  Setup / OPT /              |
|  Mute     |  Mute / Dimmer              |
|  You Tube |  Shift + Yellow / YouTube / |
|  Internet |  Display / Media            |

| Original   | Replacement   |
|--|---|
|  Home         |  Shift + Menu /          |
|  Netflix      |  Shift + Red / Netflix / |
|  Vol+         |  Vol+                    |
|  Vol-         |  Vol-                    |
|  CH+          |  CH+ / Page+             |
|  CH-          |  CH- / Page-             |
|  *            |  Menu / Home             |
|  Up           |  Up                      |
|  Down         |  Down                    |
|  Right/Zoom+ |  Right                  |
|  Left/Zoom- |  Left                  |
|  OK         |  OK                    |
|  Back       |  Back / Return         |
|  Exit       |  Exit / Cancel / Clear |
|  Info       |  Info / Angle          |
|  USB        |  Shift + 8             |
|  =          |  Text / Goto           |





| Original     | Replacement                 |
|--------------|-----------------------------|
|              | Sleep / Timer               |
|              | Guide / EPG / -/--          |
|              | Fav / Marker / PC           |
|              | Smart / List                |
|              | Picture / Format            |
|              | Sound / Title               |
|              | Subtitle / EQ               |
|              | Red / Netflix / Search      |
|              | Green / APP / Repeat        |
|              | Yellow / YouTube / Repeat   |
|              | Blue / Prime Video / Random |
|              | I<< / Preset-               |
|              | Stop / Hold                 |
|              | Play / Slow                 |
|              | Pause / Step / Freeze       |
|              | >>I / Preset+               |
| << button"/> | << / Tune-                  |

| Original | Replacement  |
|----------|--------------|
|          | >> / Tune+   |
|          | D.Menu / Top |

