







 





 

 
 






 




 

 






Original	Replacement	Original	Replacement
 Power	 Power	 Vol-	 Vol-
 Source	 AV / Input / RDS	 CH List	 Smart / List
 1	 1	 PR-	 CH- / Page-
 2	 2	 Media.P	 Picture / Format
 3	 3	 Menu	 Menu / Home
 4	 4	 Guide	 Guide / EPG / -/-
 5	 5	 Tools	 Setup / OPT /
 6	 6	 Up	 Up
 7	 7	 Info	 Info / Angle
 8	 8	 Left	 Left
 9	 9	 Enter	 OK
 TTX/MIX	 Text / Goto	 Right	 Right
 0	 0	 Return	 Shift + Back / Return
 PRE-CH	 Back / Return	 Down	 Down
 Vol+	 Vol+	 Exit	 Exit / Cancel / Clear
 Mute	 Mute / Dimmer	 Red/A	 Red / Netflix / Search
 PR+	 CH+ / Page+	 Green/B	 Green / APP / Repeat





	Original	Replacement	Original	Replacement
	Yellow/C	 Yellow / YouTube / Repeat		
	Blue/D	 Blue / Prime Video / Random		
	P.Mode	 D.Menu / Top		
	Dual/I-II	 Eject / Surround		
	3D	 TV/Radio /		
	AD	 Audio / Lang I/II		
	P.Size	 Zoom / Size		
	Subt	 Subtitle / EQ		
	<<	 << / Tune-		
	Pause	 Pause / Step / Freeze		
	>>	 >> / Tune+		
	Rec	 Rec / Rec Mode		
	Play	 Play / Slow		
	Stop	 Stop / Hold		

